


Flymo

 Electrolux

Turbo Trim XL 400

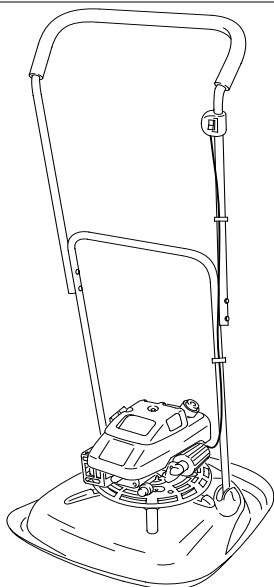

GB

IMPORTANT INFORMATION

Read before use and retain for future reference

DE

WICHTIGE INFORMATION

Bitte vor dem Benutzen des Gerätes durchlesen und gut aufbewahren

FR

RENSEIGNEMENTS IMPORTANTS

A lire avant usage et à conserver pour référence ultérieure

NL

BELANGRIJKE INFORMATIE

Leest u deze informatie voor het gebruik en bewaar ze voor toekomstige raadpleging

NO

VIKTIG INFORMASJON

Les bruksanvisningen før bruk og oppbevar denne for senere bruk.

FI

TÄRKEÄÄ TIETOA

Lue tämä ennen käyttöä ja säilytä myöhempää tarvetta varten

SE

VIKTIG INFORMATION

Läs anvisningarna före användningen och spara dem för framtida behov

DK

VIGTIGE OPLYSNINGER

De bør læse dette før brug og gemme til senere henvisning

ES

INFORMACIÓN IMPORTANTE

Léase antes de utilizar y consérvela como referencia en el futuro

PT











INFORMAÇÕES IMPORTANTES









Leia antes de utilizar e guarde para consulta futura

IT

INFORMAZIONI IMPORTANTI

Leggere prima dell'uso e conservare per consultazione futura

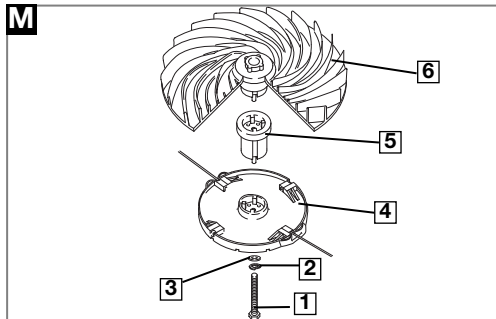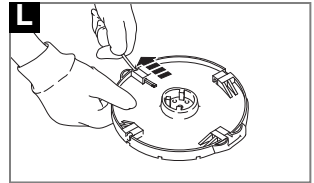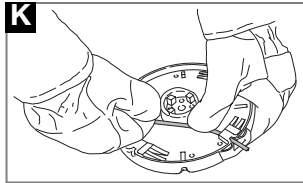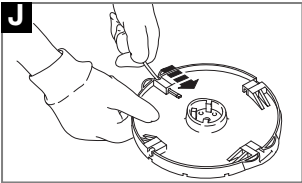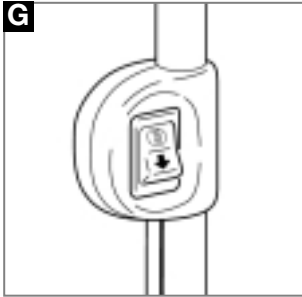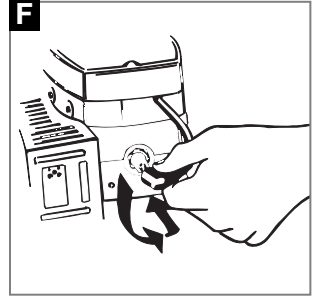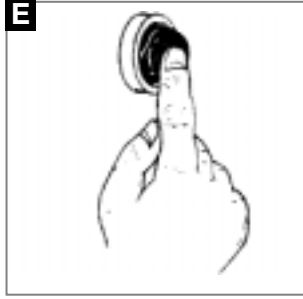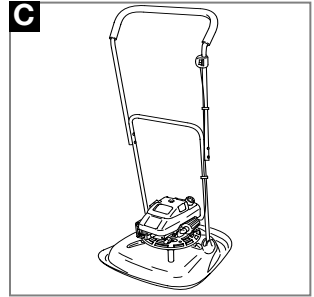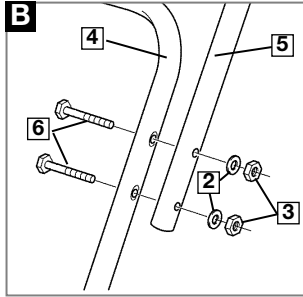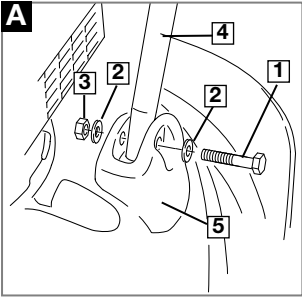

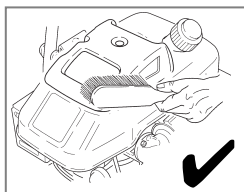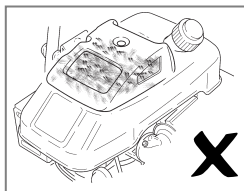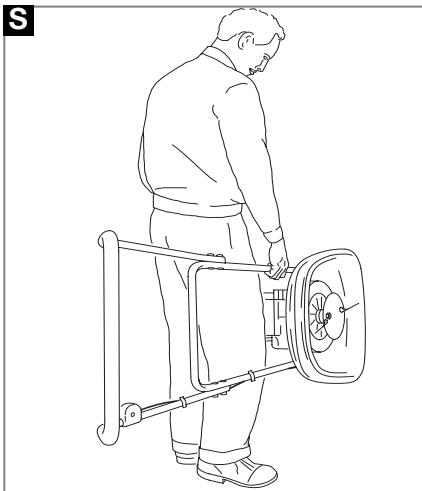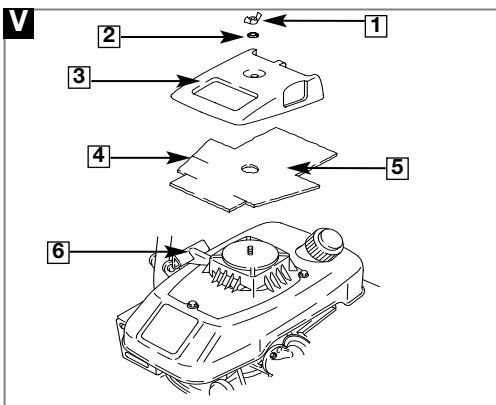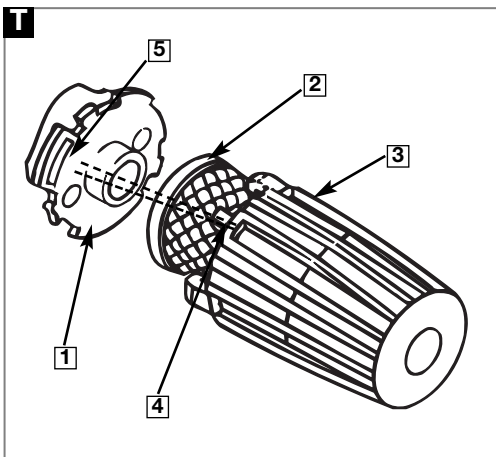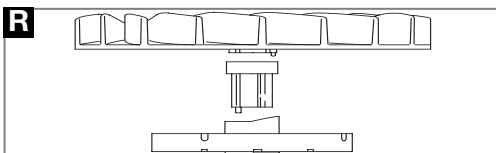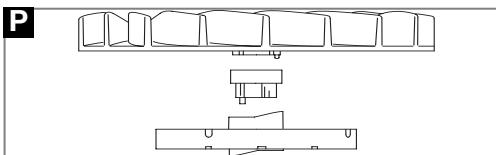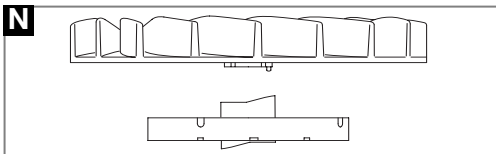


GB - CONTENTS	NL - INHOUD	SE - INNEHÅLL	PT - LEGENDA
1. Start/Stop Switch	1. Start/Stopschakelaar	1. Start/stoppkontakt	1. Interruptor de Ligar/Desligar
2. Upper Handle	2. Bovenste duwboom	2. Øvre handtag	2. Cabo Superior
3. Tie Wrap (x2)	3. Bindveter (x2)	3. Kabelband (2 st)	3. Presilha (x2)
4. Washer (x8)	4. Borgschijfe (x8)	4. Bricka (8 st)	4. Arruela (x8)
5. Locknut (x6)	5. Borgmoer (x6)	5. Låsmutter (6 st)	5. Porca de Aperto (x6)
6. Upper Handle Fixing Bolt (X4)	6. Bevestigingsbout voor bovenste duwboom (x4)	6. Øvre handtagets fästbultar (4 st)	6. Parafuso de Fixação do Cabo Superior (x4)
7. Lower Handle Fixing Bolt (x2)	7. Bevestigingsbout voor onderste duwboom (x2)	7. Nedre handtagets fästbultar (2 st)	7. Parafuso de Fixação do Cabo Inferior (x2)
8. Starting Handle	8. Starthendel	8. Starthandtag	8. Pega de Arranque
9. Fuel Tank Cap	9. Dop voor benzinetank	9. Tanklock	9. Tampa do Depósito de Combustível
10. Air Filter	10. Luchtfilter	10. Luftfilter	10. Filtro de Ar
11. Debris Guard	11. Beschermpak	11. Skräpskydd	11. Resguardo contra detritos
12. Primer	12. Ontsteking	12. Flödare	12. Bomba de Injeção Manual
13. 8 spare cutting lines (coloured green)	13. 8 reservemaaikoorden (groen)	13. 8 kaplinor i reserv (grönfärgade)	13. 8 Linhas de Corte Sobresselentes (de cor verde)
14. Spark Plug Lead	14. Bougiekabel	14. Tändkabel	14. Fio da vela de ignição
15. Instruction Manual	15. Handboek	15. Instruktionsbok	15. Manual de Instruções
16. Large Spacer	16. Kleine pasring	16. Liten mellanlåggsbricka	16. Espaçador Pequeno
17. Small Spacer	17. Grote pasring	17. Stor mellanlåggsbricka	17. Espaçador Grande
18. Spanner	18. Sleutel	18. Skiftnyckel	18. Chave inglesa
19. Warning Label	19. Waarschuwingsetiket	19. Varningsetikett	19. Etiqueta de Aviso
20. Product Rating Label	20. Product-informatielabel	20. Produktmärkning	20. Rótulo de Avaliação do Produto
DE - INHALT	NO - INNHOLD I ESKEN	DK - INDHOLD	IT - NOMENCLATURA
1. Start-/Stoppsschalter	1. Start/stopp bryter	1. Start/stoppkontakt	1. Interruttore acceso/spento
2. Oberer Griff (x2)	2. Øvre håndtak	2. Øvre håndtag	2. Manico superiore
3. Kabelhalter (x8)	3. Kabel strips (2 stk)	3. Kabelklemme (2 stk.)	3. Fermo (x2)
4. Unterlegscheibe (x6)	4. Skiver (8 stk)	4. Spændskive (8 stk.)	4. Rondella (x8)
5. Sicherungsmutter	5. Låsemutter (6 stk)	5. Låsemøtrik (6 stk.)	5. Controdado (x6)
6. Befestigungsbolzen oberer Griff (x4)	6. Festebolt for øvre håndtak (4 stk)	6. Fastgøringsbolt til øvre håndtag (4 stk.)	6. Bullone di fissaggio per manico superiore (x4)
7. Befestigungsbolzen, unterer Griff (x2)	7. Festebolt for nedre håndtak (2 stk)	7. Fastgøringsbolt til nedre håndtag (2 stk.)	7. Bullone di fissaggio per manico inferiore (x2)
8. Starterseil	8. Starthåndtak/snor	8. Starthåndtag	8. Maniglia di avviamento
9. Tankkappe	9. Bensintanklokk	9. Benzindæksel	9. Tappo serbatoio carburante
10. Luftfilter	10. Luftfilter	10. Luftfilter	10. Filtro aria
11. Schmutzfänger	11. Motordeksel	11. Affaldsskærm	11. Protezione antidebriti
12. Primer	12. Primer	12. Primer	12. Primer (innesco)
13. 8 Ersatzfaden (grün)	13. Ekstra tråd (8 stk) (grønne)	13. 8 ekstra klippesnører (grønne)	13. 8 lamelle di scorta (di colore verde)
14. Zündkerzenzuleitung	14. Ledning/hette for tennplugg	14. Tændrørsledning	14. Conduttore candela
15. Bedienungsanleitung	15. Bruksanvisning	15. Brugsvejledning	15. Manuale d'istruzioni
16. Kleines Abstandsstück	16. Lite avstandsstykke	16. Lille afstandsstykke	16. Distanziale piccolo
17. Großes Abstandsstück	17. Stort avstandsstykke	17. Stort afstandsstykke	17. Distanziale grande
18. Schraubenschlüssel	18. Skiftenøkkel	18. Skruenøgle	18. Chiave
19. Warnetikett	19. Advarselsetikett	19. Advarselmærkat	19. Etichetta di pericolo
20. Produkttypschild	20. Produktmerking	20. Produktets mærkeskilt	20. Etichetta dati del prodotto
FR - TABLE DES MATIÈRES	FI - SISÄLTÖ	ES - CONTENIDO	
1. Interrupteur de marche/arrêt	1. Käynnistyks/ pysäytyskatkaisin	1. Interruptor de contacto	
2. Poignée supérieure (x2)	2. Ylävärsi	2. Manillar superior	
3. Attache (x8)	3. Kiinnityskappale (2 kpl)	3. Amarra (x2)	
4. Rondelle (x6)	4. Pultin välirengas (8 kpl)	4. Arandela (x8)	
5. Contre-écrou	5. Lukitusmutteri (6 kpl)	5. Tuerca inaflojable (x6)	
6. Boulon de fixation de la poignée supérieure (x4)	6. Ylävarren kiinnityspultti (4 kpl)	6. Perno de fijación de manillar superior (x4)	
7. Boulon de fixation de la poignée inférieure (x2)	7. Alavarren kiinnityspultti (2 kpl)	6. Perno de fijación de manillar inferior (x2)	
8. Poignée de démarrage	8. Käynnistyskahva	8. Manilla de arranque	
9. Capuchon du réservoir de combustible	9. Polttoainesäiliön korkki	9. Tapa del tanque de combustibles	
10. Filtre à air	10. Ilmansuodatin	10. Filtro de aire	
11. Protection contre les débris	11. Roskasuojin	11. Protector contra desechos	
12. Dispositif d'amorçage	12. Rikastin	12. Cebador	
13. 8 lignes de coupe de réserve(de couleur verte)	13. Kahdeksan (vihreää) varaleikkusuimaa	13. 8 repuestos de cuerdas para cortar (color verde)	
14. Fil de bougie	14. Sytytustulpan johdin	14. Cable de la bujía	
15. Manuel d'instructions	15. Käyttöohjeet	15. Manual de Instrucciones	
16. Petite entretoise	16. Pieni välike	16. Espaciador pequeño	
17. Grande entretoise	17. Suuri välike	17. Espaciador grande	
18. Clé	18. Mutteriavain	18. Llave de tuercas	
19. Etiquette d'avertissement	19. Varoitussimike	19. Etiqueta de Advertencia	
20. Plaque des Caractéristiques du Produit	20. Ruohonleikkurin arvokilpi	20. Placa de Características del Producto	

(GB) CARTON CONTENTS
(DE) KARTONINHALT
(FR) CONTENU DU CARTON
(NL) INHOUD

(NO) KARTONGENS
INNHold
(FI) PAKETIN SISÄLTÖ
(SE) FÖRPACKNINGENS
INNEHÅLL
(DK) KARTONINDHOLD

(ES) CONTENIDO DEL
CARTON
(PT) LEGENDAS DOS
DESENHOS
(IT) DEL CARTONE

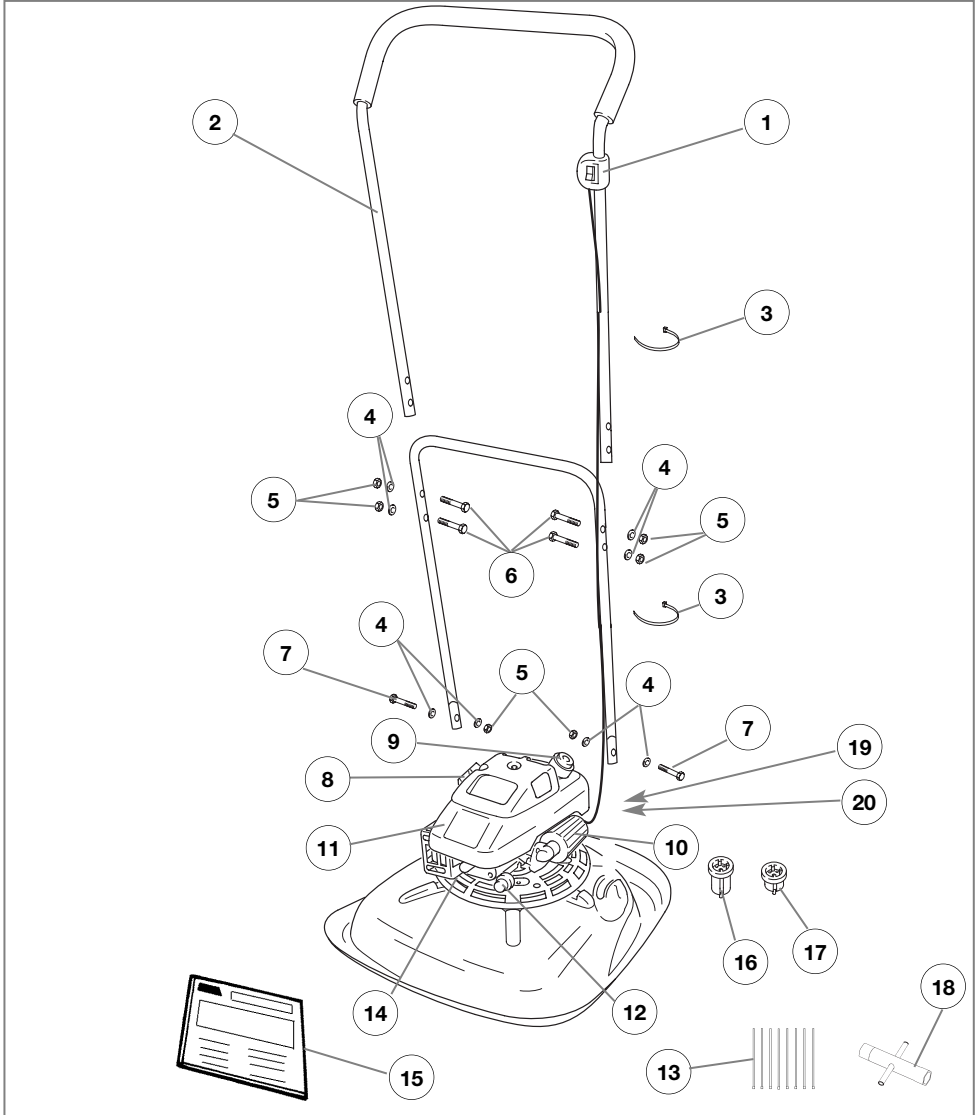

Safety Precautions



If not used properly this trimmer can be dangerous! This trimmer can cause serious injury to the operator and others, the warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this trimmer. The operator is responsible for following the warning and safety instructions in this manual and on the trimmer.

Explanation of Symbols on the Turbo Trim XL400



Warning



Read the user instructions carefully to make sure you understand all the controls and what they do.



The use of ear protection is recommended.



Disconnect the spark plug before attempting any maintenance, cleaning or adjustment, or if you are going to leave the trimmer unattended for any period.



Never allow children or people unfamiliar with these instructions to use the trimmer. Local regulations may restrict the age of the operator.



Never use, or attempt to fit, a metal/bar blade with this product.

General

1. Only use the trimmer in the manner and for the functions described in these instructions.
2. Keep bystanders away. Do not trim whilst people, especially children or pets, are in the trimming area.
3. Never operate the trimmer when you are tired, ill or under the influence of alcohol, drugs or medicine.
4. The operator or user is responsible for accidents or hazards occurring to other people or their property.

Fuel Safety

WARNING - Petrol is highly flammable

- Store fuel in a cool place in a container specifically designed for the purpose.
- Only use a container that is specially designed for mixing fuel.
- Your trimmer has a 2-stroke engine which runs on fuel of 1 part of oil to 25 parts of petrol.
- Do not use standard 2-stroke mixture as supplied by garages, neat petrol or multi grade oil.
- Use a good quality 2-stroke oil or a quality SAE 30 oil mixed with fresh REGULAR grade unleaded petrol.
- Refuel outdoors only and do not smoke while refuelling.
- Wipe dirt and grass clippings from the fuel tank filler cap to avoid getting dirt into the fuel tank.
- Add fuel **BEFORE** starting the engine. Never remove the cap of the fuel tank or add fuel while the engine is running or when the engine is hot.



- If petrol is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until petrol vapours have dissipated.
- Never use stale fuel left from last season or fuel which has been stored for long periods.
- Replace all fuel tanks and container caps securely.
- Fuel should be stored in a cool place away from naked flames.
- Your carburettor is pre-set. Normally no further adjustment is required.

Preparation


1. While using your product always wear substantial footwear and long trousers.
2. Make sure the area to be cut is clear of sticks, stones, bones, wire and debris; they could be thrown by the cutting line.
3. Before using always visually inspect to see that cutting lines, disc bolts and disc assembly are not worn or damaged. Replace worn or damaged cutting lines together with their fixings in sets to preserve balance.
4. Have faulty silencers replaced

Use

1. Do not operate the engine in a confined space where exhaust fumes (carbon monoxide) can collect.
2. Use the trimmer only in daylight or good artificial light.
3. Avoid operating your trimmer in wet grass, where feasible.
4. Take care in wet grass, you may lose your footing.
5. On slopes, be extra careful of your footing and wear non-slip footwear.
6. Exercise extreme caution when changing direction on slopes.
7. Trimming on banks and slopes can be dangerous, and you should use extreme caution if using the trimmer in this manner. When operating the trimmer on banks or steep slopes it is important that the feet of the operator remain firmly on level ground.
8. Do not walk backwards when trimming, you could trip. Walk, never run.
9. Never cut grass by pulling the trimmer towards you.
10. Stop the engine before pushing the trimmer across surfaces other than grass and when transporting the trimmer to and from the area to be mowed.
11. Do not overspeed the engine or alter governor settings. Excessive speed is dangerous and shortens trimmer life.
12. Always start the trimmer carefully with feet well away from the cutting lines.
13. Do not tilt the trimmer when starting the engine, except if the trimmer has to be tilted for starting. In this case, do not tilt more than absolutely necessary and lift only the part which is away from the operator. Always ensure that both hands are in the operating position before returning the appliance to the ground.
14. Never pick up or carry a trimmer while the engine is running
15. Spark plug lead may be hot - handle with care.
16. Do not attempt any maintenance on your trimmer when the engine is hot.

Safety Precautions

- Cutting disc continues to rotate after the machine is switched off. Wait until all machine components have completely stopped before touching them.
- Switch off the engine, wait until the cutting disc has stopped, disconnect the spark plug lead and wait until the engine has cooled:-
 - before leaving the trimmer unattended for any period;
 - before refuelling
 - before clearing a blockage;
 - before checking, cleaning or working on the trimmer;
 - if you hit an object. Do not use your trimmer until you are sure that the entire trimmer is in a safe operating condition;
 - if the trimmer starts to vibrate abnormally. Check immediately. Excessive vibration can cause injury.
- If the engine is provided with a shut-off valve, turn the fuel off at the conclusion of trimming.

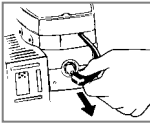

Maintenance and storage

- Keep all nuts, bolts and screws tight to be sure the trimmer is in safe working condition.
- Replace worn or damaged parts for safety.
- Only use the replacement cutting disc, cutting line, disc bolt, spacer and impeller specified for this product.
- Never store the trimmer with fuel in the tank inside a building where fumes can reach an open flame or spark.
- Allow the engine to cool before storing in any enclosure.
- To reduce fire hazard, keep the engine, muffler and fuel storage area free of grass, leaves or excessive grease.
- If the fuel tank has to be drained, this should be done outdoors.
- Be careful during adjustment of the machine to prevent entrapment of the fingers between moving parts and fixed parts of the machine.

Fuel Mixing Instructions

- Ensure mixing bottle and cap are clean and standing on a level surface.
- Add fresh regular grade unleaded petrol up to the 1 litre mark on the bottle.
- Add a good quality 2 stroke oil, to the 25 : 1 mark (40 ml of oil) on the bottle.
- Screw cap on, shake container until petrol and oil are thoroughly mixed.
- Clean fuel tank filler cap and fill fuel tank.
 - UK ONLY:-** Electrolux Outdoor Products manufacture a specially designed fuel mixing bottle. For further information contact your local Electrolux Outdoor Products Service Centre/Stockist or contact the Electrolux Outdoor Products Customer Careline on 01325 300303

Assembly and Adjustment

Assembly of lower handle to deck(Fig A)

With the trimmer on the ground:-

- Remove the bolts (A1), washers (A2) and lock nuts (A4) from the polythene bag.
- Place one washer (A2) on to the bolt (A1) and secure the lower handle (A4) by placing bolt (A1) through deck bracket (A5) and lower handle (A4).
- Place washer (A2) on bolt and secure with lock nut (A3).

Assembly of upper handle to lower handle (Fig B)

Assemble upper handle (B5) to lower handle (B4) by fitting bolts (B6) and washers (B2) and securing with lock nuts (B3).

Handle Position

The handle position can be altered by moving it forward for the park position (Fig C) or back for the trimming position (Fig D).

Starting and Stopping

Before Starting your Trimmer

Filling the Fuel Tank

- Clean around fuel cap.
- Remove cap.
- Add fuel mix (See Fuel mixing instructions)
- Never use stale fuel left from last season or fuel which has been stored for long periods.
- Refit fuel tank cap and wipe up any spilled fuel.

USING THE ENGINE PRIMER (E)

 
FIRST START - or after running the fuel tank dry.

Press the primer 20 times and then follow steps 1 - 6 in 'To Start your Trimmer'. If the engine fails to start after 5 pulls of the starting handle, leave the product to stand for 15 minutes. Press the primer a further 10 times and follow steps 1 - 6 again.

COLD START - if the engine is cold and there is fuel in the tank. Press the primer 8 - 10 times .

WARM START - if the engine is warm and there is fuel in the tank - **DO NOT USE THE PRIMER**. If the engine has run out of fuel, refill tank and prime 8 - 10 times.

To Start your Trimmer



- Move the handle to the Parking position (C).
- Connect the spark plug lead (F).
- Move the start/stop switch to 'start' position (G).
- Place your right foot firmly on the deck and grasp the top of the lower handle with your left hand. Tilt the trimmer towards you (H). This ensures the product is in a secure position when starting and also prevents an unsightly ring being cut in your lawn.
- Pull the starting handle (H1) gently until you feel a resistance, return the starting handle slowly.
- Pull the starting handle firmly towards you to its full extent to start the engine and then return the starting handle slowly.
- Allow the engine to reach its full running speed then gently lower the trimmer onto the ground.

To Stop your Trimmer

- Move start/stop switch to 'stop' position. (G)
- As the engine dies, tilt the trimmer to one side. This prevents a ring being cut in your lawn.
- When the engine has stopped, lower the trimmer onto the ground.
- Put the handle in the Parking position (C).

Removing and Fitting Cutting Line - Height Adjustment

- The cutting line is sharp, wear gloves and take care when handling it. Check the cutting line frequently during use and on completion of trimming.

Removing the Cutting Line

1. Switch machine off and disconnect spark plug lead.
2. Push the line towards the centre of the cutting disc and carefully remove. (J)

Fitting the Cutting Line

1. Holding the line with thumb and forefinger and using other thumb as a guide, curve around centre portion of the cutting disc (K) and thread through the hole on the rim of the cutting disc.
2. Carefully pull the line into place as illustrated in Fig. L.
 - At all times the amount of line extending beyond the edge of disc should be of an even length. If there is a variation of more than half an inch between the four lengths of line replace immediately with 2 full new lengths.
- Only use **Green** coloured cutting line on the Turbo Trim XL400.

Changing the height of cut

Three heights of cut ONLY

N. Highest height of cut

R. Lowest height of cut

1. Loosen bolt (M1), using the spanner provided. Remove bolt (M1), spring washer (M2), washer (M3) cutting disc (M4) and spacer (M5) (if fitted).
2. Carefully remove impeller (M6) from engine shaft.
3. Select required height of cut, (N, P, & R) and replace any cutting lines required.
 - **Important:- Cutting line must be on the side of the disc facing the grass when fitted.**
4. Replace impeller (M6) on to engine shaft ensuring that it is correctly located. Replace spacer (M5) (if fitted), cutting disc (M4), washer (M3), spring washer (M2) and bolt (M1).
5. Secure assembly with bolt (M1), making sure complete assembly is tight, (if in doubt, contact your service dealer).

Caring for your Trimmer

If you do not intend to use your trimmer for long periods it is advisable to follow this procedure after use:-

1. Move the start/stop switch to stop.
2. The engine will begin to stop, tilt the trimmer.
3. Once the engine has stopped, disconnect the spark plug lead (F).
4. Remove all fuel from the fuel tank.

Cleaning

- **Keep your trimmer clean - grass clippings left in any of the air intakes, around the engine or under the deck could become a potential fire hazard. Do not clean with chemicals, including petrol, or solvents - some can destroy critical plastic parts.**
1. Remove grass from under the deck with a piece of wood or similar.
 2. Using a soft brush - remove grass clippings from around the engine and from all air intakes.
 3. Remove the fan. See 'Height adjustment', and clean with a soft brush.
 4. Wipe over the surface of your trimmer with a dry cloth.

Carrying your Trimmer

- **Never carry a trimmer when it is running** Carry the trimmer at the point of balance with the cutting system facing away from you (S).

Storing Your Trimmer

Store in a cool, dry, damp-proof and safe place. Service your trimmer after the last cut of the year as follows:-

At the end of the Trimming Season.

- **Switch off the engine, wait until the cutting disc has stopped and disconnect the spark plug lead BEFORE attempting any maintenance or adjustment.**

1. Allow the engine to cool. Drain the fuel tank (Fuel left in the engine becomes stale and causes difficult starting.)
2. Remove the spark plug lead and spark plug. Pour one teaspoon (5ml) of oil through the spark plug hole. Pull the starting handle 2 or 3 times. This will distribute oil on the internal surfaces of the engine. Inspect, clean and replace the spark plug. If a new spark plug is required contact your local approved Service Centre/Dealer.

Do not re-connect the spark plug lead.

3. Clean the air filter. See 'Cleaning the Air Filter'.
4. Renew the cutting disc if it is cracked, damaged or bent. Renew the disc bolt if necessary.
5. Use only genuine parts and accessories specified for this product.
6. Clean your trimmer thoroughly. See 'Cleaning'.
7. Your local approved Service Centre/Dealer will carry out any service or repairs required.
8. Store your trimmer in a cool, dry, damp-proof and safe place.

Cleaning the Air Filter

- Your Tecumseh engine is equipped with a dry paper cartridge air filter.
- Every 10 operating hours check condition of paper cartridge.
- Every 50 operating hours or more regularly - (see Air Filter Cleaning Instructions number 1).
- If engine is operating in dusty or dirty areas the air filter system will require shorter maintenance intervals.
- Do not attempt to wash, clean, or oil the paper cartridge.

Air Filter Cleaning Instruction

1. Turn cover (T3) (anti-clockwise). Remove cover and filter (T2) from flange (T1). Discard paper cartridge.
2. Clean cover and flange thoroughly.
3. Insert new cartridge (T2) onto flange (T1).
4. Position cover (T3) against flange (T1) with tab (T4) on cover inserted into slot (T5) in flange.
5. Push cover firmly against flange and turn it (clockwise) as far as it will go. Be sure retainers are locked around flange.

Cooling system debris guard

Cooling system air-intake

- **Never operate the engine without the debris guard and foam filter being fitted, failure to fit the debris guard and foam filter will cause premature engine failure.**
1. Ensure the debris guard is kept clean, check frequently during use.
 2. Clean the debris guard using a soft brush.
 3. If debris guard is very dirty, unscrew wing knob (V1) and remove washer (V2), debris guard (V3) and foam filter (V5).
 4. Wash foam filter in clean soapy water, rinse, wrap in a clean dry cloth and 'squeeze dry'.
 5. Re-assemble ensuring that the recoil rope (V6) passes through the slot (V4) in the foam filter.

Fault Finding

Engine Will Not Start

1. Ensure that the start/stop switch is in the start position.
2. Check that there is sufficient fuel of the correct mix in the fuel tank.
3. The engine may have flooded. Remove and dry the spark plug.
4. Fuel mixture may be incorrect or stale - if so - replace with fresh mixture.
5. Check that the disc bolt is tight. A loose disc bolt could cause difficult starting.
6. **If the engine will still not start - disconnect the spark plug lead and consult your local approved Service Centre/Dealer.**

Poor Flotation or Lack of Power

1. Disconnect the spark plug lead.

2. Clean the underside of the hood, the air filter, the fan, around the engine and the air intakes.
3. Fuel mixture may be incorrect or stale - if so - replace with fresh mixture.
4. **If poor flotation or lack of power persists - disconnect the spark plug lead and consult your local approved Service Centre/Dealer.**

Excessive Vibration

1. Disconnect the spark plug lead.
2. Check that the cutting disc and cutting lines are correctly fitted. **See 'Cutting Line and Height Adjustment'.**
3. If the cutting lines or cutting disc are damaged or worn replace them with a new ones.
4. **If vibration persists - do not use - disconnect the spark plug lead and consult your local approved Service Centre/Dealer.**

Service Recommendations

- **Your product is uniquely identified by a silver and black product rating label.**
- **We strongly recommend that your product is serviced at least every twelve months, more often in a professional application.**

Guarantee and Guarantee Policy

If any part is found to be defective due to faulty manufacture within the guarantee period, Electrolux Outdoor Products, through its Authorised Service Repairers will effect the repair or replacement to the customer free of charge providing:

- (a) Where the machine is used commercially the guarantee is 90 days.
 - (b) The fault is reported directly to the Authorised Repairer.
 - (c) Proof of purchase is provided.
 - (d) The fault is not caused by misuse, neglect or faulty adjustment by the user.
 - (e) The failure has not occurred through fair wear and tear.
 - (f) The machine has not been serviced or repaired, taken apart or tampered with by any person not authorised by Electrolux Outdoor Products.
 - (g) The machine has not been used for hire.
 - (h) The machine is owned by the original purchaser.
 - (i) The product has not been used outside of the country in which it was purchased.
- * This guarantee is additional to, and in no way diminishes the customers statutory rights.

Failures due to the following are not covered, therefore it is important that you read the instructions contained in this Operator's Manual and understand how to operate and maintain your machine:

Failures not covered by guarantee

- * Replacing worn or damaged cutting lines and cutting disc.
- * Failures as a result of not reporting an initial fault.
- * Failures as a result of sudden impact.
- * Failures as a result of not using the product in accordance with the instructions and recommendations contained in this Operator's Manual.
- * Machines used for hire are not covered by this guarantee.
- * The following items listed are considered as wearing parts and their life is dependent on regular maintenance and are, therefore not normally subject to a valid warranty claim: Cutting lines, cutting disc, belts, cables, recoil ropes, filters.
- * **Caution!** Electrolux Outdoor Products does not accept liability under the warranty for defects caused in whole or part, directly or indirectly by the fitting of replacement parts or additional parts that are not either manufactured or approved by Electrolux Outdoor Products, or by the machine having been modified in any way.

Environmental Information

Electrolux Outdoor Products are manufactured under an Environmental Management System (ISO 14001) using, where practical, components manufactured in the most environmentally responsible manner, according to company procedures, and with the potential for recycling at the end of the products' life.

- Packaging is recyclable and plastic components have been labelled (where practical) for categorised recycling.
- Awareness of the environment must be considered when disposing of 'end-of-life' product.
- If necessary, contact your local authority for disposal information.

DISPOSAL OF FUELS AND LUBRICATING OILS

- Wear protective clothing when handling any fuels and lubricants.
- Avoid contact with skin.
- Remove petrol and engine oil before transporting the product.
- Contact your local authority for information of your nearest Recycling/Disposal Station.
- **Do NOT dispose of used fuels/oils with household waste**
- **Do NOT dispose of used fuels/oils to water.**
- **Waste fuels/oils are harmful, but can be recycled and should be disposed of through the recognised facilities.**
- **Do NOT incinerate**

<p>I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham. DL5 6UP. Certify that the Lawnmower-Category..... Petrol Hover Trimmer Make..... Electrolux Outdoor Products Conforms to the specifications of Directive 2000/14/EEC</p>	<p>I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham. DL5 6UP. Certify that a sample of the above product has been tested using directive 81/1051/EEC as a guide. The maximum A-weighted sound pressure level recorded at operator position under free field semi anechoic chamber conditions was :-</p>	<p>I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham. DL5 6UP. Certify that a sample of the above product has been tested using ISO 5349 as a guide. The maximum weighted root mean square value of vibration recorded at operator's hand position was:-</p>
<p>Type of Cutting Device.....Cutting Line Identification of Series.....See Product Rating Label Conformity Assessment Procedure.....ANNEX VI Notified Body.....I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England Other Directives:.....98/37/EEC, 89/336/EEC & applicable standards:-EN292:1&2, EN292: 1, EN ISO14982:1998</p>	<p>Type..... A Engine Manufacturer..... B Width of Cut..... C Speed of Rotation of Cutting Device..... D Guaranteed sound power level..... E Measured Sound Power Level..... F Level..... G Value..... H Weight..... J</p>	

<p>Ich, der Unterzeichner M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham. DL5 6UP. bescheinige hiermit, dass der Rasenmäher:- Kategorie..... Benzinluftkissentrimmer Fabrikat..... Electrolux Outdoor Products die Spezifikationen der Direktive 2000/14/EG erfüllt</p>	<p>Ich, der Unterzeichner M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, bescheinige hiermit, daß eine Probe des obigen Produkts getestet wurde und dabei Direktive 81/1051/EWG als Richtschnur verwendet wurde. Der maximale A-gewichtete Schalldruckpegel, der an der Bedienerposition unter Freifeld-Halbschallot-Kammerbedingungen gemessen wurde, betrug:-</p>	<p>Ich, der Unterzeichner M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, bescheinige hiermit, daß eine Probe des obigen Produkts getestet wurde und dabei ISO 5349 als Richtschnur verwendet wurde. Der maximale gewichtete Vibrationseffektivwert, der an der Handposition des Bedieners gemessen wurde, betrug:-</p>
---	---	--

<p>Schneidwerktyp..... Schnur Identifizierung der reihe.....Siehe Produkttypenschild Konformitätsbestätigungsverfahren.....ANNEX VI Benachrichtigte Behörde.....I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England Andere Direktiven.....98/37/EEC, 89/336/EEC und Normen:.....EN292:1&2, EN292: 1, EN ISO14982:1998</p>	<p>Typ..... A Motorhersteller..... B Schnittbreite..... C Umdrehungsgeschwindigkeit des Schneidwerks..... D Garantierter Geräuschpegel..... E Gemessener Geräuschpegel..... F Höhe..... G Wert..... H Gewicht..... J</p>
--	---

<p>Je soussigné M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham. DL5 6UP. certifie que la tondeuse:- Catégorie..... Taille-herbe sur coussin d'air à essenc Marque..... Electrolux Outdoor Products est conforme aux spécifications de la Directive 2000/14/EEC</p>	<p>Je soussigné M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, Grande-Bretagne, certifie qu'un échantillon du produit ci-dessus a été essayé selon les indications de la directive 81/1051/EEC. Le niveau maximum pondéré de pression acoustique enregistré à la position de l'opérateur en champ libre en chambre demi-sourde était de:-</p>	<p>Je soussigné M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, Grande-Bretagne, certifie qu'un échantillon du produit ci-dessus a été essayé selon les indications de la norme ISO 5349. La moyenne quadratique pondérée des vibrations enregistrées à la position de la main de l'opérateur était de:-</p>
--	---	---

<p>Type d'outil de coupe.....Fil de coupe Identification de la serie.....Voir la Plaquette D'identification Procédure d'évaluation de la conformité.....ANNEX VI Organisme notifié.....I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England Autres directives.....98/37/EEC, 89/336/EEC et aux normes.....EN292:1&2, EN292: 1, EN ISO14982:1998</p>	<p>Type..... A Fabricant du moteur..... B Largeur de coupe..... C Vitesse de rotation de l'outil de coupe..... D Niveau garanti de puissance sonore..... E Niveau mesuré de puissance sonore..... F Niveau..... G Valeur..... H Poids..... J</p>
---	---

<p>Ik, ondergetekende M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham. DL5 6UP. verklaar dat de grasmaaimachine:- Categorie..... Benzine zweefmaaië Merk..... Electrolux Outdoor Products Voldoet aan de specificaties van directief 2000/14/EEC</p>	<p>Ik, ondergetekende M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, verklaar hierbij dat een proefexemplaar van het bovengenoemde product is getest volgens richtlijn 81/1051/EEC. Het maximale A-belaste geluidsdruk niveau dat is geregistreerd bij de positie van de bediener in een semi geluidsdichte ruimte bij vrije veld condities bedraagt:-</p>	<p>Ik, ondergetekende M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, verklaar hierbij dat een proefexemplaar van het bovengenoemde product is getest volgens ISO 5349 als richtlijn. De maximale belaste effectieve waarde van trilling, geregistreerd bij de positie van de hand van de bediener, bedraagt:-</p>
---	--	---

<p>Type maaier.....Snijdraad Identificatie van serie.....Zie Productlabel Procedure voor het beoordelen van conformiteit.....ANNEX VI Op de hoogte gestelde instantie.....I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England Andere directieven.....98/37/EEC, 89/336/EEC en aan de volgende normen.....EN292:1&2, EN292: 1, EN ISO14982:1998</p>	<p>Type..... A Fabrikant van motor..... B Maaibreedte..... C Toerental maaier..... D Gegarandeerd geluidsvermogen..... E Gemeten geluidsvermogen..... F Niveau..... G Waarde..... H Gewicht..... J</p>
---	---

<p>El abajo firmante M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham. DL5 6UP. Certifica que el cortacésped: Categoría..... Podadora aerodeslizadora de gasolina Marca..... Electrolux Outdoor Products Está conforme con las especificaciones de la Directiva 2000/14/EEC</p>	<p>El abajo firmante M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham DL5 6UP. Certifico que ha sido probada una muestra del producto anteriormente mencionado utilizando la directiva 81/1051/EEC como guía. El máximo nivel de presión de sonido ponderado A registrado en la posición del operario bajo condiciones de cámara anecoica de semi campo fue de:-</p>	<p>El abajo firmante M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham DL5 6UP. Certifico que ha sido probada una muestra del producto anteriormente mencionado utilizando como guía ISO 5349. El valor máximo ponderado de la media de la raíz cuadrada de la vibración registrada en la posición de la mano del operario fue de-</p>
<p>Tipo de dispositivo de corte..... Cordón de corte Identificación de la serie..... Ver Etiqueta de Identificación Del Producto Procedimiento de evaluación de conformidad.....ANNEX VI Organismo notificado..... I.T.S., Cleeve Road, Leatherhead, Surrey. KT22 7SB England Otras directivas..... 98/37/EEC, 89/336/EEC y con las normativas.EN292:1&2, EN292: 1, EN ISO14982:1998</p>	<p>Tipo..... A Fabricante del motor..... B Anchura de corte..... C Velocidad de rotación del dispositivo de corte..... D Nivel de potencia sonora garantizado..... E Nivel de potencia sonora medido..... F Nivel..... G Valor..... H Peso..... J</p>	

<p>Eu, abaixo assinado, M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham. DL5 6UP. Certifico que a Máquina de Cortar Relva- Categoría... Máquina de Cortar Relva (Trimmer) a Gasolina, com Almofada de Ar Marca..... Electrolux Outdoor Products Está em conformidade com a Directiva 2000/14/CEE</p>	<p>Eu, abaixo assinado, M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, Certifico que uma amostra do produto acima foi testada tendo como guia a directiva 81/1051/CEE. O valor máximo da média pesada A do nível de pressão do som registado na posição do operador, em condições de câmara semi-anecoica de campo livre foi:-</p>	<p>Eu, abaixo assinado, M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, Certifico que uma amostra do produto acima foi testada tendo como guia a norma ISO 5349. O valor máximo da média quadrática pesada da vibração registado na posição da mão do operador foi:-</p>
<p>Tipo de Dispositivo de Corte... Linha de Corte Identificação da série..... Consulte a Etiqueta de Especificações do Produto Procedimento de Avaliação de Conformidade.....ANNEX VI Órgão Notificado..... I.T.S., Cleeve Road, Leatherhead, Surrey. KT22 7SB England Outras Directivas..... 98/37/EEC, 89/336/EEC e com as normas..... EN292:1&2, EN292: 1, EN ISO14982:1998</p>	<p>Tipo A Fabricante do Motor..... B Largura de Corte..... C Velocidade de Rotação do Dispositivo de Corte..... D Nível de Intensidade de Som Garantido..... E Nível de Intensidade de Som Medido..... F Nível..... G Valor..... H Peso..... J</p>	

<p>Il sottoscritto M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham. DL5 6UP. dichiara che il tagliaerba:- Categoría..... Tagliaboardi aerosicvolante a benzina Marca..... Electrolux Outdoor Products è conforme alle normative della Direttiva 2000/14/CEE</p>	<p>Il sottoscritto, M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, dichiara che un campione del suddetto prodotto è stato testato in base alla direttiva 81/1051/CEE. Il livello massimo di pressione sonora categoria A rilevato in corrispondenza della posizione di guida in condizioni di camera semianecoica in campo libero era di:-</p>	<p>Il sottoscritto, M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, dichiara che un campione del suddetto prodotto è stato testato in base alla direttiva ISO 5349. Il valore ponderale massimo di vibrazione sonora efficace rilevato in corrispondenza delle mani dell'operatore era di:-</p>
<p>Tipo di lama..... Linea tagliente Identificazione serie..... Vedi Etichetta Dati Prodotto Procedura di valutazione della conformità.....ANNEX VI Ente notificato..... I.T.S., Cleeve Road, Leatherhead, Surrey. KT22 7SB England Altre direttive..... 98/37/EEC, 89/336/EEC e alle normative..... EN292:1&2, EN292: 1, EN ISO14982:1998</p>	<p>Tipo..... A Marca motore..... B Larghezza di taglio..... C Velocità di rotazione della lama..... D Livello sonoro garantito..... E Livello sonoro misurato..... F Livello..... G Valore..... H Peso..... J</p>	

A	HVT40
B	Tecumseh TC300
C	40 cm
D	5,000 RPM
E	103 dB (A)
F	103 dB (A)
G	83.3 dB(A)
H	2.83 m/s²
J	10.5 kg



Newton Aycliffe, 2002
M. Bowden,
Research & Development Director

BELGIQUE/BELGIË	Flymo Belgique/België Tel: 02 363 0311, Fax: 02 363 0391
ČESKÁ REPUBLIKA	Electrolux, spol. s.r.o., oz Electrolux Outdoor Products, Na Křečku 365, Praha 10 - Horní Měcholupy. Tel: 02/7847 0164, Info-linka: 0800/110 220 Internet: www.partner-flymo.cz E-mail: info@husqvarna.cz
DANMARK	Electrolux Outdoor Products, Flymo/Partner A/S, Lundtoftegaardsvej 93A, DK 2800 Kgs.Lyngby Tel: 45 87 75 77, Fax: 45 93 33 08, www.flymo-partner.dk
DEUTSCHLAND	Flymo Deutschland Tel: 097 21 7640, Fax:097 21 764202
ESTONIA	Electrolux Estonia Ltd (Electrolux Eesti AS) Tel: (372) 6650010
FRANCE	Flymo France SNC Tel 01 46 67 8141, Fax 01 43 34 2491
FINLAND SUOMI	Electrolux Outdoor Products Finland Tel: 00 358 9 39611, Fax: 00 358 9 3961 2644
ITALIA	McCulloch Italiana s.r.l. - Via Como 72, 23868 Valmadrera (LECCO) - ITALIA Tel: 800 017829, Fax: 0341 581671
IRELAND	Flymo Ireland Tel: 01 4565222, Fax: 01 4568551
MAGYARORSZÁG	Electrolux Lehel Kft Tel: 00 36 1 251 41 47
NORGE	Flymo/Partner, div. av Electrolux Motor a.s. Tel: 69 10 47 90
NEDERLAND	Flymo Nederland Tel: 0172-468322, Fax: 0172-468219
ÖSTERREICH	Husqvarna-Ges.m.b.H. Nfg. KG, Industriezeile 36, 4010 LINZ, Tel: 0732 770101-0, Fax: 0732 770101-40, email: office@husqvarna.co.at Internet: www.husqvarna.at
POLSKA	Electrolux Poland Sp. z.o.o. Husqvarna, Wysockiego 15 b 03-371 Warszawa Tel:- (0-22) 330 96 00, Fax: (0-22) 330 96 35
SLOVENIJA	Husqvarna-Ges.m.b.H. Nfg. KG, Industriezeile 36, 4010 LINZ, Tel: 0732 770101-0, Fax: 0732 770101-40, email: office@husqvarna.co.at Internet: www.husqvarna.at
SLOVENSKA	Electrolux Slovakia s.r.o., Borova Sihot 211, 033 01 Lipt. Hradok Tel: 044 522 14 19, Fax: 044 522 14 18, www.flymo-partner.sk
SCHWEIZ/SUISSE/SUIZZERA	Flymo Schweiz/Suisse/Suizzera Tel 062 889 93 50 / 889 94 25, Fax 062 889 93 60 / 889 94 35
SVERIGE	Electrolux Outdoor Products, Sverige Tel: 036 – 14 67 00, Fax: 036 – 14 60 70
UNITED KINGDOM	Electrolux Outdoor Products United Kingdom Tel: 01325 300303, Fax: 01325 310339

Electrolux Outdoor Products
Aycliffe Industrial Park
NEWTON AYCLIFFE
Co.Durham DL5 6UP
ENGLAND

Telephone - (00) 44 1325 300303 Fax - (00) 44 1325 310339

UK Telephone - 01325 300303 Fax - 01325 310339

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice. Electrolux Outdoor Products manufacture products for a number of well known brands under various registered patents, designs and trademarks in several countries.

© Electrolux Outdoor Products Ltd. Registered Office, Electrolux Works, Oakley Road, Luton LU4 9QQ
Registered number 974979 England



The Electrolux Group. The world's No.1 choice.

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use.

More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

