


# Flymo

 Electrolux

# Micro Lite

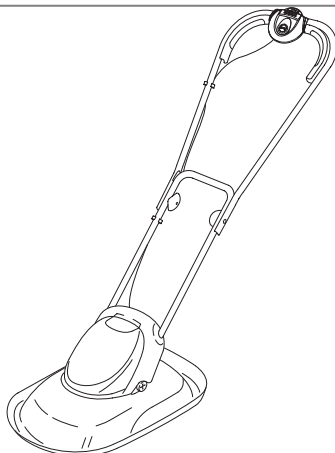

GB

#### IMPORTANT INFORMATION

Read before use and retain for future reference

DE

#### WICHTIGE INFORMATION

Bitte vor dem Benutzen des Gerätes durchlesen und gut aufbewahren

FR

#### RENSEIGNEMENTS IMPORTANTS

A lire avant usage et à conserver pour référence ultérieure

NL

#### BELANGRIJKE INFORMATIE

Leest u deze informatie voor het gebruik en bewaar ze voor toekomstige raadpleging

NO

#### VIKTIG INFORMASJON

Les bruksanvisningen nøye før bruk og oppbevar den for senere bruk

FI

#### TÄRKEÄÄ TIETOA

Lue tämä ennen käyttöä ja säilytä myöhempää tarvetta varten

SE

#### VIKTIG INFORMATION

Läs anvisningarna före användningen och spara dem för framtida behov

DK

#### VIGTIGE OPLYSNINGER

Du bør læse brugsanvisningen før brug og gemme til senere henvisning

ES

#### INFORMACIÓN IMPORTANTE

Léase antes de utilizar y consérvela como referencia en el futuro

PT

#### INFORMAÇÕES IMPORTANTES

Leia antes de utilizar e guarde para consulta futura

IT

#### INFORMAZIONI IMPORTANTI

Leggere prima dell'uso e conservare per ulteriore consultazione

HU

Jótállást vállalni csak rendeltetészerűen használatba vett gépekre tudunk. Kérjük, hogy a gép használatba vétele előtt gondosan olvassa el a kezelési utasításokat.

PL

Gwarancja traci ważność w przypadku używania urządzenia do celów innych niż wymienione w instrukcji obsługi. Prosimy o uważne przeczytanie instrukcji oraz o stosowanie się do zaleceń i wskazówek w niej zawartych

CZ












Záruka se nebude vztahovat na závady způsobené nesprávným používáním, nebo jestliže bude výrobek použit pro jiné účely než pro jaké byl vyroben, nebo také jinak než je uvedeno v návodu k obsluze. Tento návod si přečtěte, prosím, velmi pozorně a uchovejte jej pro možné budoucí odkazy











SK

Záruka na tento produkt nebude uznaná v prípade porúch spôsobených nesprávnou obsluhou alebo používaním výrobku na iný účel alebo iným spôsobom, ako je uvedené. Pred začatím práce si prosím dôkladne prečítajte návod na obsluhu a tento si aj pred prípad potreby uschovajte

SI


Garancija ne velja ob nepravilni uporabi proizvoda in/ali ob uporabi za drugi namen kot je izdelan. Prosimo, da pred uporabo, preverite pazljivo navodila za obratovanje in jih shranite za kasnejšo rabo.

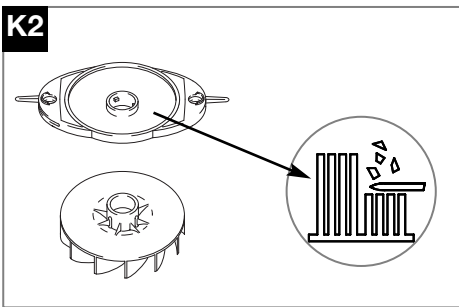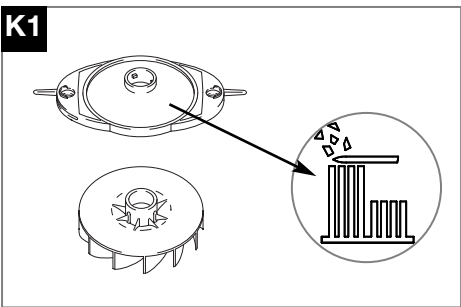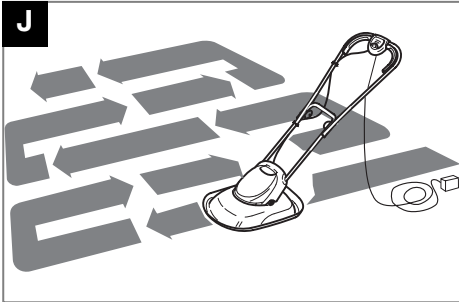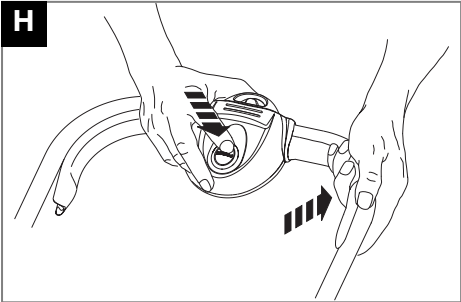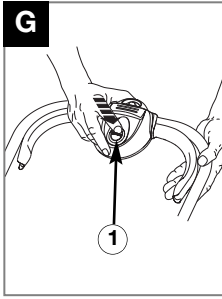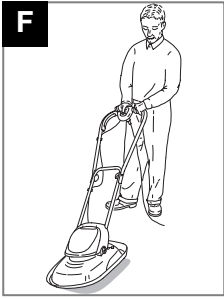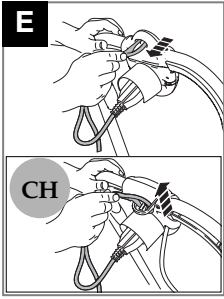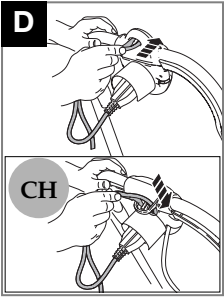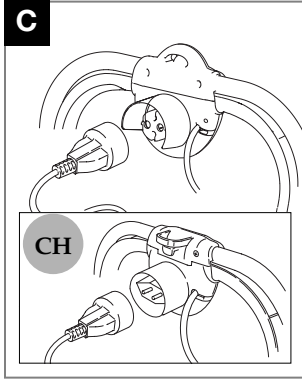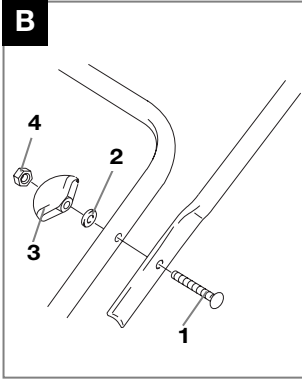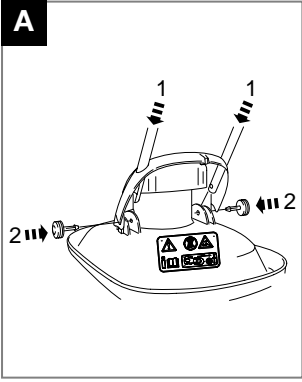

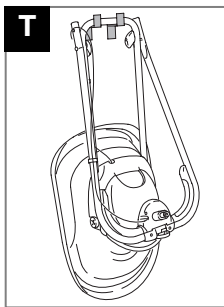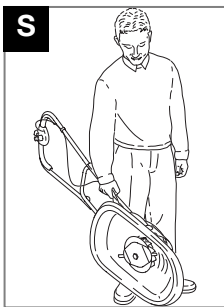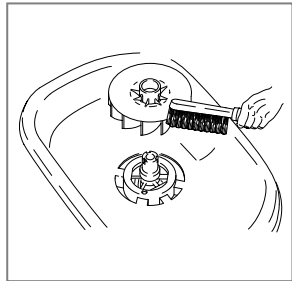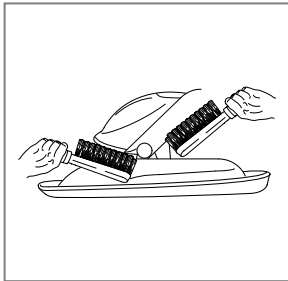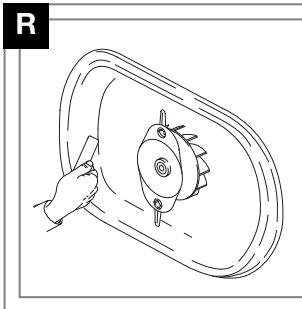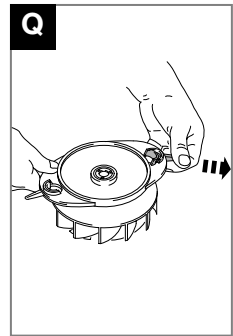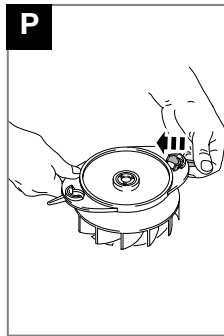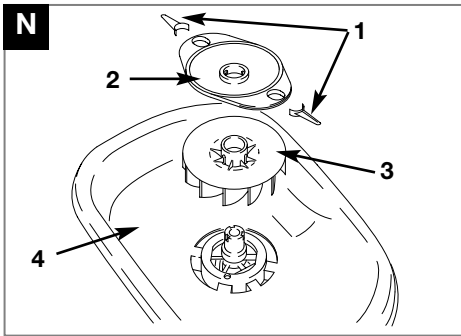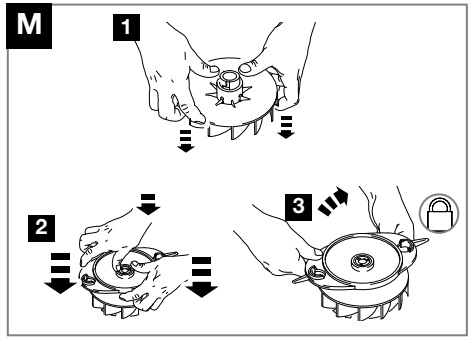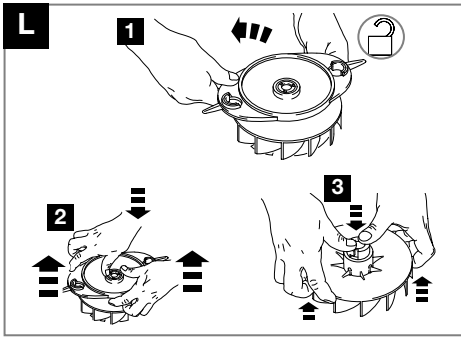

<b>GB - CONTENTS</b>	<b>NO - INNHOLD</b>	<b>ES - CONTENIDO</b>	<b>PL - ZAWARTOSC KARTONU</b>
1. Switchbox	1. Bryterboks	1. Caja de conmutador	1. Puszka przyłączeniowa
2. Start/stop lever	2. Start/Stopp hendel	2. Palanca de arranque/parada	2. Dźwignia start/stop
3. Lock off button	3. Utløserknappen	3. Botón de traba	3. Przycisk blokady Włącznika
4. Upper handle	4. Øvre håndtak	4. Empuñadura superior	4. Górny uchwyty
5. Cable clip	5. Kabelklemme (kabelsko)	5. Grapa de cable	5. Zaczep kabla
6. Bolt	6. Bolt	6. Perno	6. Śruba
7. Washer	7. Skive (pakning)	7. Arandela	7. Podkładka
8. Handle knob	8. Håndtakknapp	8. Manija de empuñadura	8. Gałka mocująca
9. Nut (if applicable)	9. Mutter (om relevant)	9. Tuercas (si fuera aplicable)	9. Nakrętka (jeżeli jest)
10. Lower handle	10. Nedre håndtak	10. Empuñadura inferior	10. Dolny uchwyty
11. Motor Cover	11. Motordeksel	11. Cubierta de motor	11. Pokrywa silnika
12. Fixing Pin	12. Festeppinne	12. Pasador de fijación	12. Sworzec mocujący
13. Hood	13. Hette	13. Capucha	13. Osłona
14. Plastic cutters	14. Plastkniver avstandsstykker	14. Cortadoras plásticas	14. Plastikowe noże
15. Instruction Manual	15. Bruksanvisning	15. Manual de instrucciones	15. Instrukcja Obsługi
16. Warning Label	16. Advarselsetikett	16. Etiqueta de Advertencia	16. Znaki bezpieczeństwa
17. Product Rating Label	17. Produktmerking	17. Placa de Características del Producto	17. Tabliczka znamionowa
<b>DE - INHALT</b>	<b>FI - SISÄLTÖ</b>	<b>PT - LEGENDA</b>	<b>CZ - POPIS STROJE</b>
1. Schalter	1. Kytinkeräsia	1. Caixa de distribuição	1. Spínací skříňka
2. Start-/Stoppebel	2. Käynnistyskahva	2. Barra para começar/parar	2. Spouštěcí/vypínací páka
3. Verriegelungsknopf	3. Turvakytkinnappia	3. Botão de segurança	3. Tlačítko "lock-off"
4. Oberer Griff	4. Ylempi kahva	4. Guiador superior	4. Horní rukojeť
5. Kabelhalter	5. Johdon pidike	5. Grampo do cabo	5. Úchytká kabelu
6. Bolzen	6. Pultti	6. Cavilha	6. Šroub
7. Unterlegscheibe	7. Tiivistysrengas	7. Anilha	7. Podložka
8. Griffknopf	8. Kahvan nuppi	8. Maçaneta	8. Otočný knoflík na rukojeti
9. Mutter (falls vorhanden)	9. Mutteri (jos käytössä)	9. Porca (se aplicável)	9. Matice (pokud se používá)
10. Unterer Griff	10. Alempi kahva	10. Guiador inferior	10. Spodní rukojeť
11. Motorabdeckung	11. Moottorin suojakansi	11. Tampa do motor	11. Kryt motoru
12. Paßstift	12. Kiinnitystappi	12. Parafuso	12. Spojovací kolík
13. Haube	13. Suojus	13. Cobertura do motor	13. Kryt
14. Kunststoffklingen	14. Muovi terät	14. cortadores de plástico	14. Plastové žací lišty
15. Bedienungsanweisung	15. Käyttöopas	15. Manual de Instruções	15. Návod na obsluhu
16. Warnetikett	16. Varoitustunnus	16. Etiqueta de Aviso	16. Výstražný štítek
17. Produkttypenschild	17. Ruohonleikkurin arvokilpi	17. Rótulo de Avaliação do Produto	17. Typový štítek výrobku
<b>FR - TABLE DES MATIÈRES</b>	<b>SE - INNEHÅLL</b>	<b>IT - INDICE CONTENUTI</b>	<b>SK - OBSAH</b>
1. Boîtier de commande.	1. Kopplingsdosas	1. Cassetta dell'interruttore	1. Spínacia skrinka
2. Levier de démarrage/arrêt	2. Start/stopp-reglage	2. Leva di avviamento	2. Zapínač/vypínač
3. Le bouton orange du contacteur	3. Säkerhetsknappen	3. Pulsante	3. Spúšťacie tlačidlo
4. Guidon supérieur	4. Øvre handtag	4. Impugnatura superiore	4. Vrchná rukoväť
5. Attache câble	5. Kabelklämma	5. Morsetto per il cavo	5. Svorka na kábel
6. Boulons	6. Bult	6. Bullone	6. Skrutka
7. Rondelles	7. Bricka	7. Rondella	7. Podložka
8. Bouton de Guidon	8. Knopp för handtag	8. Manopola dell'impugnatura	8. Kĺb rukoväte
9. Ecrrou (si applicable)	9. Mutter (om sådan är monterad)	9. Dado (se pertinente)	9. Matka (ak aplikovateľné)
10. Guidon inférieur	10. Undre handtag	10. Impugnatura inferiore	10. Spodná rukoväť
11. Couvercle du moteur	11. Motorskydd	11. Coperchio del motore	11. Kryt motora
12. Chevilles de fixation	12. Fästbult	12. Perno di fissaggio	12. Upevňovací kolík
13. Capot	13. Kåpa	13. Calotta di protezione	13. Veko
14. Racleur en plastique	14. Skärblad av plast	14. Lame di plastica	14. Plastové nože
15. Manuel d'Instructions	15. Bruksanvisning	15. Manuale di istruzioni	15. Príručka
16. Etiquette d'avertissement	16. Varningsetikett	16. Etichetta di pericolo	16. Varovný štítek
17. Plaquette des Caractéristiques du Produit	17. Produktmärkning	17. Etichetta dati del prodotto	17. Prístrojový štítek
<b>NL - INHOUD</b>	<b>DK - INDHOLD</b>	<b>HU - TARTALOMJEGYZÉK</b>	<b>SI - VSEBINA</b>
1. Schakelaar	1. Afbryderkontakt	1. Kapcsolódoboz	1. Ohišje stikala
2. Start/stop-hendel	2. Start/stophåndtag	2. Start/Stop kar	2. Start-stop ročka
3. Veiligheidsknop	3. Låseknappen	3. Biztonsági gomb	3. Zaporni gumb
4. Bovenstuk van duwboom	4. Øvre håndtak	4. Felső tolókar	4. Zgoranje držalo
5. Snoerklem	5. Kabelklemme	5. Kábelrögzítő	5. Sponka za kábel
6. Bout	6. Bolt	6. Csavar	6. Vijak
7. Pakkingring	7. Spændeskive	7. Alátét	7. Podložka
8. Knop voor duwboom	8. Håndtagsknop	8. Rögzítógomb	8. Pritrdilna matica
9. Moer (indien van toepassing)	9. Møtrik (hvis relevant)	9. Anya (ha van)	9. Matica (če je priložena)
10. Onderstuk van duwboom	10. Nedre håndtag	10. Alsó tolókar	10. Spodnje držalo
11. Motorkap	11. Motordeksel	11. Motor fedele	11. Pokrov motorja
12. Bevestigingspin	12. Håndtagstift	12. Rögzítőcsap	12. Pritrdilni trn
13. Kap	13. Skjold	13. Védőburkolat	13. Varovalni pokrov
14. Plastic messen	14. Plastskæreblande	14. Műanyag vágókés	14. Plastična rezila
15. Handleiding	15. Brugsvejledning	15. Kezelési útmutató	15. Príručník
16. Waarschuwingsetiket	16. Advarselsmærkat	16. Figyelmeztető címke	16. Opozorilna oznaka
17. Product-informatielabel	17. Produktets mærkeskilt	17. Termékminőség címke	17. Tipna tablica

<b>(GB)</b>	CARTON CONTENTS	<b>(SE)</b>	FÖRPACKNINGENS INNEHÅLL	<b>(IT)</b>	CONTENUTO
<b>(DE)</b>	KARTONINHALT	<b>(DK)</b>	KARTONINDHOLD	<b>(HU)</b>	A DOBOZ TARTALMA
<b>(FR)</b>	CONTENU DU CARTON	<b>(ES)</b>	CONTENIDO DEL CARTON	<b>(PL)</b>	ZAWARTOŚĆ KARTONU
<b>(NL)</b>	INHOUD	<b>(PT)</b>	LEGENDAS DOS DESENHOS	<b>(CZ)</b>	OBSAH KRABICE
<b>(NO)</b>	KARTONGEN INNEHOLDER			<b>(SK)</b>	OBSAH BALENIA
<b>(FI)</b>	PAKETIN SISÄLTÖ			<b>(SI)</b>	VSEBINA ŠKATLE

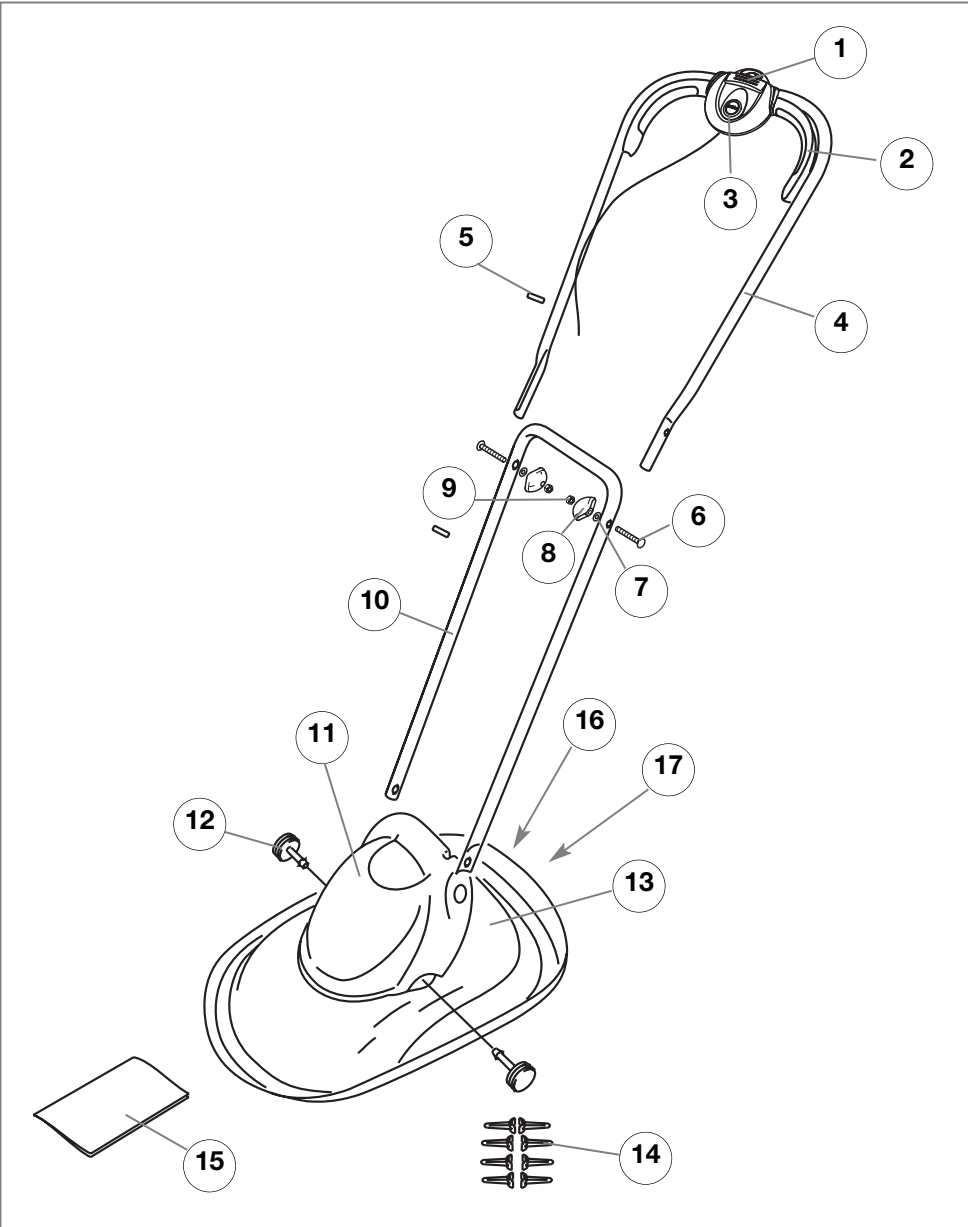

## SAFETY PRECAUTIONS



If not used properly this lawnmower can be dangerous! This lawnmower can cause serious injury to the operator and others, the warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this lawnmower. The operator is responsible for following the warning and safety instructions in this manual and on the lawnmower.

### Explanation of Symbols on the Micro Lite



 
Warning



Read the user instructions carefully to make sure you understand all the controls and what they do.



Switch off, remove plug from mains before adjusting, cleaning or if cable is entangled or damaged.



Always keep the lawnmower on the ground when mowing. Tilting or lifting the lawnmower may cause stones to be thrown out



Do not mow in the rain or leave the lawnmower outdoors while raining



The use of eye protection is recommended

### General

1. Never allow children or people unfamiliar with these instructions to use the mower. Local regulations may restrict the age of the operator.
2. Only use the lawnmower in the manner and for the functions described in these instructions.
3. Never operate the lawnmower when you are tired, ill or under the influence of alcohol, drugs or medicine.
4. The operator or user is responsible for accidents or hazards occurring to other people or their property.

### Electrical

1. The use of a Residual Current Device (R.C.D.) with a tripping current of not more than 30mA is recommended. Even with a R.C.D. installed 100% safety cannot be guaranteed and safe working practice must be followed at all times. Check your R.C.D. every time you use it.
2. Before use, examine cable for damage, replace it if there are signs of damage or ageing.
3. Do not use the lawnmower if the electric cables are damaged or worn

4. Immediately disconnect from the mains electricity supply if the cable is cut, or the insulation is damaged. Do not touch the electric cable until the electrical supply has been disconnected. Do not repair a cut or damaged cable. Replace it with a new one.
5. Your extension cable must be uncoiled, coiled cables can overheat and reduce the efficiency of your mower.
6. Keep cable away from lawnmower, always work away from the power point mowing up and down, never in circles.
7. Do not pull cable around sharp objects.
8. Always switch off at the mains before disconnecting any plug, cable connector or extension cable.
9. Switch off, remove plug from mains and examine electric supply cable for damage or ageing **before** winding cable for storage. Do not repair a damaged cable, replace it with a new one. Use only Flymo replacement cable.
10. Always wind cable carefully, avoiding kinking.
11. Never carry the product by the cable.
12. Never pull on the cable to disconnect any of the plugs.
13. Use only on AC mains supply voltage shown on the product rating label.
14. Flymo products are double insulated to EN60335. Under no circumstance should an earth be connected to any part of the product.

### Cables

Use only 1.00mm<sup>2</sup> size cable up to 30 metres length maximum.

### Maximum rating:

1.00mm<sup>2</sup> size cable 10 amps 250 volts AC

1. Mains cables and extensions are available from your local Electrolux Outdoor Products Approved Service Centre.
2. Only use extension cables specifically designed for outdoor use.

### Preparation

1. While using your product always wear substantial footwear and long trousers.
2. Make sure the lawn is clear of sticks, stones, bones, wire and debris; they could be thrown by the plastic cutters.
3. Before using the machine and after any impact, check for signs of wear or damage and repair as necessary.
4. Replace worn or damaged plastic cutters in pairs to preserve balance.

### Use

1. Use the lawnmower only in daylight or good artificial light.
2. Avoid operating your lawnmower in wet grass, where feasible.
3. Take care in wet grass, you may lose your footing.

## SAFETY PRECAUTIONS

- On slopes, be extra careful of your footing and wear non-slip footwear.
- Mow across the face of slopes, never up and down.
- Exercise extreme caution when changing direction on slopes. Walk never run.
- Mowing on banks and slopes can be dangerous. Do not mow on **banks** or **steep** slopes.
- Do not walk backwards when mowing, you could trip.
- Never cut grass by pulling the mower towards you.
- Switch off before pushing the mower over surfaces other than grass.
- Never operate the lawnmower with damaged guards or without guards in place.
- Keep hands and feet away from the cutting means at all times and especially when switching on the motor.
- Do not tilt lawnmower when the motor is running, except when starting and stopping. In this case, do not tilt more than absolutely necessary and lift only the part which is away from the operator. Always ensure that both hands are in the operating position before returning the appliance to the ground.
- Never pick up or carry a mower when it is operating or still connected to the mains supply.
- Remove the plug from the mains :
  - before leaving the mower unattended for any period;
  - before clearing a blockage;
  - before checking, cleaning or working on the appliance;
  - if you hit an object. Do not use your lawnmower until you are sure that the entire lawnmower is in a safe operating condition.;
  - if the lawnmower starts to vibrate abnormally. Check immediately. Excessive vibration can cause injury.

### Maintenance and storage

- Keep all nuts, bolts and screws tight to be sure the lawnmower is in safe working condition.
- Replace worn or damaged parts for safety.
- Only use replacement plastic cutters specified for this product.
- Be careful during adjustment of the lawnmower to prevent entrapment of the fingers between moving plastic cutters and fixed parts of the machine.

## ASSEMBLY INSTRUCTIONS

### Lower Handle to Hood Assembly

See Fig A

- Ensure the motor cover is fitted correctly, as illustrated
  - Tilt and lock motor cover into forward position before assembly
- Insert lower handles through the 2 holes in the motor cover and push down.
  - Secure lower handles to hood by firmly pushing fixing pins through holes in motor cover, handle and hood.

**B1 - bolt, B2 - washer, B3 - handle knob, B4 - nut (if applicable)**

### Fitting Upper Handles to Lower Handles (B)

- Ensure the upper handle is located correctly with the lock-off button on the switchbox uppermost.
- Ensure the upper handle and the lower handle are aligned correctly.
- Insert the nut into the handle knob (if applicable).
- Fit the bolts, washers and handle knobs.
- Fit the cables to the handles with the cable ties provided, making sure the cables are not trapped between the upper and lower handles.

## STARTING AND STOPPING

### To Start your Lawnmower

- Connect female extension cable connector to the back of the switchbox. **(C)**
- Form loop in mains cable and push the loop through the slot as illustrated in picture **(D)**
- To secure, position loop over the hook and pull the cable back through the slot as illustrated in picture **(E)**.
- Connect plug to mains and switch on.
- Move handle to the mowing position. See Fig. F.
- To prevent a ring being cut in your lawn, tilt your lawnmower slightly **(F)**.

**The switchbox is provided with a lock-off button (G1) to prevent accidental starting.**

- Press and hold the lock-off button **(G)** on the switchbox, then squeeze one of the Start/Stop levers towards the upper handle **(H)**.
- Continue to squeeze the start/stop lever towards the upper handle and release the lock-off button.
- When the lawnmower has reached full speed gently lower it onto the lawn.

### NOTE

**There are two start/stop levers fitted. Either one can be used for starting the lawnmower.**

### IMPORTANT

**Do not use the start/stop levers intermittently**

### To Stop your Lawnmower

- To prevent a ring being cut in your lawn, tilt your lawnmower slightly **(F)**.
- Release the pressure on the Start/Stop lever.

## HOW TO MOW

1. Start mowing the edge of the lawn nearest to the power point so that the cable is laid out on the lawn you have already cut. **(J)**
2. Cut your grass twice a week during the growing season, your lawn will suffer if more than a third of its length is cut at one time.

**Do Not Overload Your Mower.** Mowing long thick grass may cause the motor speed to drop, you will hear a change in the motor sound. If the motor speed drops you may overload your lawnmower which may cause damage. When mowing in long thick grass a first cut with the cutting height set higher will help reduce the load. See Adjusting the Cutting Height.

## ADJUSTING THE CUTTING HEIGHT

**K1 - Highest height of cut - This symbol visible after fitting.**

**K2 - Lowest height of cut - This symbol visible after fitting.**

### • THERE ARE 2 CUTTING HEIGHTS

- **Height of cut is adjusted by turning over the cutting head.**
- Disconnect from the mains electricity supply and wait until the cutting head has stopped rotating. Turn your lawnmower upside down.

### To Remove the Cutting Head and Fan (L)

1. Hold the fan firmly and twist the cutting head anti-clockwise as illustrated.

2. Hold the cutting head in the centre and remove as illustrated.
3. Hold fan in the centre and remove as illustrated.
4. Inspect for damage and clean as necessary.

### To Refit the Fan and the Cutting Head (M)

1. Replace the fan as illustrated.
2. Replace the cutting head, adjusting the height of cut as required.
3. Hold the fan firmly and twist the cutting head clockwise, as illustrated.

### IMPORTANT

**ENSURE FAN AND CUTTING HEAD ARE CORRECTLY LOCATED**

## CUTTING SYSTEM MAINTENANCE

**N1 - plastic cutters, N2 - cutting head, N3 - fan, N4 - hood**

- **Always handle the plastic cutters with care - sharp edges could cause injury. USE GLOVES.**

### Checking your Cutting System(N)

- The cutting system must be kept in good condition and inspected before and after use.
- Disconnect from the mains electricity supply and wait until the cutting head has stopped rotating. Turn your lawnmower upside down.

1. Visually check cutting head for wear. Replace if damaged.
2. Visually check plastic cutters for wear and replace when necessary.
3. Plastic cutters should be straight. Replace if bent or twisted.

### Replacing Plastic cutters

- Use only genuine Flymo replacement plastic cutters specified for this product. These are available from all Electrolux Outdoor Products Service Centres and major retail outlets.

- Plastic cutters must be replaced in pairs to retain balance.
- Two plastic cutters of the same type should be fitted.
- **Never fit a steel bar blade to this product.**

### To Replace Plastic Cutters (P, Q)

- Disconnect from the mains electricity supply and wait until the cutting head has stopped rotating. Turn your lawnmower upside down.

1. Push plastic cutter towards centre of cutting disc **(P)**. Lift plastic cutter away from cutting head.
2. If the plastic cutter is broken during use - lever cutter out of the slot, and dispose of carefully.
3. Fit new plastic cutters into the slots at each side of the cutting head and pull into place **(Q)**.

### • IMPORTANT

**ENSURE PLASTIC CUTTERS ARE CORRECTLY LOCATED.**

## CARING FOR YOUR LAWNMOWER

**It is very important that you keep your lawnmower clean. Grass clippings left in any of the air intakes or under the hood could become a potential fire hazard. Never carry a lawnmower when it is running.**

### Cleaning (R)

1. Remove grass from under the hood with a piece of wood or similar.
2. Using a soft brush - remove grass clippings from all air intakes.
3. Remove the cutting head, **see Adjusting the Cutting Height**, to gain access to the fan and clean with a soft brush.
4. Wipe over the surface of your lawnmower with a dry cloth.

### IMPORTANT!

- **Never use water for cleaning your lawnmower.**

- **Do not clean with chemical, including petrol, or solvents - some can destroy critical plastic parts.**
- At the End of the Mowing Season**

1. Replace plastic cutters, bolts, nuts or screws, if necessary.
2. Clean your lawnmower thoroughly.
3. Ask your local Service Centre to clean the air filter thoroughly and carry out any service or repairs required.
4. Make sure that the electric cable is coiled properly.

### Carrying your Lawnmower (S)

Carry your lawnmower at the point of balance with the cutting head facing away from you.

### Storing your Lawnmower (T)

Store in a dry place where your lawnmower is protected from damage.



## ENVIRONMENTAL INFORMATION

Electrolux Outdoor Products are manufactured under an Environmental Management System (ISO 14001) using, where practical, components manufactured in the most environmentally responsible manner, according to company procedures, and with the potential for recycling at the end of the products' life.

- Packaging is recyclable and plastic components have been labelled (where practical) for categorised recycling.
- Awareness of the environment must be considered when disposing of 'end-of-life' product.
- If necessary, contact your local authority for disposal information.

## FAULT FINDING HINTS

### Fails to Operate

1. Is the Power Turned On?
2. Check the fuse in the plug, if blown replace.
3. Fuse continues to blow?

**Immediately disconnect from the mains electricity supply and consult your local approved Electrolux Outdoor Products Service Centre.**

### Poor Flotation

1. Disconnect from the mains electricity supply.
2. Clean the underside of the hood and the fan blades.
3. Raise to a higher height of cut. See Adjusting the Height of Cut.

4. If poor flotation persists?

**Disconnect from the mains electricity supply and consult your local approved Electrolux Outdoor Products Service Centre.**

### Excessive Vibration

1. Disconnect from the mains electricity supply.
2. Check that the blade is fitted correctly?
3. If the blade is damaged or worn, replace it with a new one.
4. If vibration persists?

**Immediately disconnect from the mains electricity supply and consult your local approved Electrolux Outdoor Products Service Centre.**

## SERVICE RECOMMENDATIONS

- **Your product is uniquely identified by a silver and black product rating label.**
- **We strongly recommend that your product is serviced at least every twelve months, more often in a professional application.**

## GUARANTEE AND GUARANTEE POLICY

If any part is found to be defective due to faulty manufacture within the guarantee period, Electrolux Outdoor Products, through its Authorised Service Repairers will effect the repair or replacement to the customer free of charge providing:

- (a) The fault is reported directly to the Authorised Repairer.
  - (b) Proof of purchase is provided.
  - (c) The fault is not caused by misuse, neglect or faulty adjustment by the user.
  - (d) The failure has not occurred through fair wear and tear.
  - (e) The machine has not been serviced or repaired, taken apart or tampered with by any person not authorised by Electrolux Outdoor Products.
  - (f) The machine has not been used for hire.
  - (g) The machine is owned by the original purchaser.
  - (h) The machine has not been used outside of the country for which it was specified.
  - (i) The machine has not been used commercially.
- \* This guarantee is additional to, and in no way diminishes the customers statutory rights.

Failures due to the following are not covered, therefore it is important that you read the instructions contained in this Operator's Manual and understand how to operate and maintain your machine:

### Failures not covered by guarantee

- \* Replacing worn or damaged plastic cutters.
- \* Failures as a result of not reporting an initial fault.
- \* Failures as a result of sudden impact.
- \* Failures as a result of not using the product in accordance with the instructions and recommendations contained in this Operator's Manual.
- \* Machines used for hire are not covered by this guarantee.
- \* The following items listed are considered as wearing parts and their life is dependent on regular maintenance and are, therefore not normally subject to a valid warranty claim: plastic cutters, Electric Mains cable.
- \* **Caution!**

Electrolux Outdoor Products does not accept liability under the warranty for defects caused in whole or part, directly or indirectly by the fitting of replacement parts or additional parts that are not either manufactured or approved by Electrolux Outdoor Products, or by the machine having been modified in any way

### EC DECLARATION OF CONFORMITY

<p>I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b>, Co. Durham. DL5 6UP. Certify that the above product Category..... <b>Electric Hover</b> Make..... <b>Electrolux Outdoor Products</b> Conforms to the specifications of Directive 2000/14/EEC</p>	<p>I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b>, Co. Durham. DL5 6UP. Certify that a sample of the above product has been tested using directive 81/1051/EEC as a guide. The maximum A-weighted sound pressure level recorded at operator position under free field semi anechoic chamber conditions was :-</p>	<p>I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b>, Co. Durham. DL5 6UP. Certify that a sample of the above product has been tested using ISO 5349 as a guide. The maximum weighted root mean square value of vibration recorded at operator's hand position was:-</p>
<p>Type of Cutting Device.....<b>Plastic Blade</b>                  Identification of Series.....<b>See Product Rating Label</b>                  Conformity Assessment Procedure.....<b>ANNEX VI</b>                  Notified Body.....<b>I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England</b>                  Other Directives:-.....<b>98/37/EEC, 89/336/EEC, 73/23/EEC</b>                  &amp; applicable standards:-<b>EN60555-2:1987, EN60555-3:1987, EN55014:1993, EN55014:1995, EN836:1997, IEC335-1:1991, IEC335-2-77:1996</b></p>	<p>Type.....<b>A</b>                  Width of Cut.....<b>B</b>                  Speed of Rotation of Cutting Device.....<b>C</b>                  Guaranteed sound power level.....<b>D</b>                  Measured Sound Power Level.....<b>E</b>                  Level.....<b>F</b>                  Value.....<b>G</b>                  Weight.....<b>H</b></p>	

### EC KONFORMITÄTSERKLÄRUNG

<p>Ich, der Unterzeichner M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b>, Co. Durham. DL5 6UP. Bescheinigung, dass das Produkt:-                  Kategorie.....<b>Elektroluftkissenmäher</b>                  Fabrikat.....<b>Electrolux Outdoor Products</b>                  die Spezifikationen der Direktive 2000/14/EG erfüllt</p>	<p>Ich, der Unterzeichner M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b>, Co. Durham, DL5 6UP, bescheinige hiermit, daß eine Probe des obigen Produkts getestet wurde und dabei Direktive 81/1051/EWG als Richtschnur verwendet wurde. Der maximale A-gewichtete Schalldruckpegel, der an der Bedienersposition unter Freifeld-Halbschalltot-Kammerbedingungen gemessen wurde, betrug:-</p>	<p>Ich, der Unterzeichner M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b>, Co. Durham, DL5 6UP, bescheinige hiermit, daß eine Probe des obigen Produkts getestet wurde und dabei ISO 5349 als Richtschnur verwendet wurde. Der maximale gewichtete Vibrationseffektivwert, der an der Handposition des Bedieners gemessen wurde, betrug:-</p>
<p>Schneidwerktyp..... <b>Kunststoffmesse</b>                  Identifizierung der reihe..... <b>Siehe Produkttypenschild</b>                  Konformitätsbestätigungsverfahren..... <b>ANNEX VI</b>                  Benachrichtigte Behörde..... <b>I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England</b>                  Andere Direktiven:-..... <b>98/37/EEC, 89/336/EEC, 73/23/EEC</b>                  und Normen:-..... <b>EN60555-2:1987, EN60555-3:1987, EN55014:1993, EN55014:1995, EN836:1997, IEC335-1:1991, IEC335-2-77:1996</b></p>	<p>Typ..... <b>A</b>                  Schnittbreite..... <b>B</b>                  Umdrehungsgeschwindigkeit des Schneidwerks..... <b>C</b>                  Garantiertes Geräuschpegel..... <b>D</b>                  Gemessener Geräuschpegel..... <b>E</b>                  Höhe ..... <b>F</b>                  Wert..... <b>G</b>                  Gewicht..... <b>H</b></p>	

### EC DÉCLARATION DE CONFORMITÉ

<p>Je soussigné M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b>, Co. Durham. DL5 6UP. Certifie que ce produit :-                  Catégorie..... <b>Coussin d'air électrique</b>                  Marque..... <b>Electrolux Outdoor Products</b>                  est conforme aux spécifications de la Directive 2000/14/EEC</p>	<p>Je soussigné M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b>, Co. Durham, DL5 6UP, Grande-Bretagne, certifie qu'un échantillon du produit ci-dessus a été essayé selon les indications de la directive 81/1051/EEC. Le niveau maximum pondéré de pression acoustique enregistré à la position de l'opérateur en champ libre en chambre demi-sourde était de:-</p>	<p>Je soussigné M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b>, Co. Durham, DL5 6UP, Grande-Bretagne, certifie qu'un échantillon du produit ci-dessus a été essayé selon les indications de la norme ISO 5349. La moyenne quadratique pondérée des vibrations enregistrées à la position de la main de l'opérateur était de:-</p>
<p>Type d'outil de coupe..... <b>Lame plastique</b>                  Identification de la serie..... <b>Voir la Plaquette D'identification</b>                  Procédure d'évaluation de la conformité..... <b>ANNEX VI</b>                  Organisme notifié..... <b>I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England</b>                  Autres directives..... <b>98/37/EEC, 89/336/EEC, 73/23/EEC</b>                  et aux normes..... <b>EN60555-2:1987, EN60555-3:1987, EN55014:1993, EN55014:1995, EN836:1997, IEC335-1:1991, IEC335-2-77:1996</b></p>	<p>Type ..... <b>A</b>                  Largeur de coupe ..... <b>B</b>                  Vitesse de rotation de l'outil de coupe ..... <b>C</b>                  Niveau garanti de puissance sonore ..... <b>D</b>                  Niveau mesuré de puissance sonore ..... <b>E</b>                  Niveau ..... <b>F</b>                  Valeur ..... <b>G</b>                  Poids ..... <b>H</b></p>	

### EC KONFORMITEITSVERKLARING

<p>Ik, ondergetekende M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b>, Co. Durham. DL5 6UP. Verklaaren dat het product:-                  Categorie.... <b>Elektrische zweefmaaier</b>                  Merk..... <b>Electrolux Outdoor Products</b>                  Voldoet aan de specificaties van directief 2000/14/EEC</p>	<p>Ik, ondergetekende M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b>, Co. Durham, DL5 6UP, verklaar hierbij dat een proefexemplaar van het bovengenoemde product is getest volgens richtlijn 81/1051/EEC. Het maximale A-belaste geluidsdrukniveau dat is geregistreerd bij de positie van de bediener in een semi geluidsdichte ruimte bij vrije veld condities bedraagt:-</p>	<p>Ik, ondergetekende M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b>, Co. Durham, DL5 6UP, verklaar hierbij dat een proefexemplaar van het bovengenoemde product is getest volgens ISO 5349 als richtlijn. De maximale belaste effectieve waarde van trilling, geregistreerd bij de positie van de hand van de bediener, bedraagt:-</p>
<p>Type maaier..... <b>Kunststof mes</b>                  Identificatie van serie..... <b>Zie Productlabel</b>                  Procedure voor het beoordelen van conformiteit..... <b>ANNEX VI</b>                  Op de hoogte gestelde instantie..... <b>I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England</b>                  Andere directieven..... <b>98/37/EEC, 89/336/EEC, 73/23/EEC</b>                  en aan de volgende normen..... <b>EN60555-2:1987, EN60555-3:1987, EN55014:1993, EN55014:1995, EN836:1997, IEC335-1:1991, IEC335-2-77:1996</b></p>	<p>Type ..... <b>A</b>                  Maaibreedte ..... <b>B</b>                  Toerental maaier ..... <b>C</b>                  Gegarandeerd geluidsvermogen ..... <b>D</b>                  Gemeten geluidsvermogen ..... <b>E</b>                  Niveau ..... <b>F</b>                  Waarde ..... <b>G</b>                  Gewicht..... <b>H</b></p>	

### EC DEKLARACJA ZGODNOŚCI

Ja, niżej podpisany M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b> , Co. Durham, DL5 6UP. Zaświadczam się że produkt:- Kategoria..... <b>Elektryczny odkurzacz</b> Wykonanie..... <b>Electrolux Outdoor Products</b> Odpowiada wymaganiom technicznym Dyrektywy Europejskiej Wspólnoty Gospodarczej (EWG) nr 2000/14/EEC	Ja, niżej podpisany M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b> , Co. Durham DL5 6UP. Anglia, oświadczam, że próbka powyższego wyrobu została przebadana stosując dyrektywę 81/1051/EEC jako wzór. Maksymalny poziom ciśnienia akustycznego, ważonego średnio A, przy pozycji operatora w warunkach częściowo bezechowej komory akustycznej pochodzącej był:-	Ja, niżej podpisany M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b> , Co. Durham DL5 6UP. Anglia, oświadczam, że próbka powyższego wyrobu została przebadana stosując ISO 5349 jako wzór. Maksymalna ważona wartość średnia kwadratowa vibracji zapisana w pozycji ręki operatora była:-
Typ Urządzenia Tnącego..... <b>Plastikowe ostrze</b> Identyfikacja serii..... <b>Patrz Tabliczka Znamionowa Wyrobu</b> Procedura Oceny Zgodności..... <b>ANNEX VI</b> Organ Rejestrujący..... <b>I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England</b> Inne Dyrektywy..... <b>98/37/EEC, 89/336/EEC, 73/23/EEC</b> oraz norm..... <b>EN60555-2:1987, EN60555-3:1987, EN55014:1993, EN55014:1995, EN836:1997, IEC335-1:1991, IEC335-2-77:1996</b>	Typ..... <b>A</b> Szerokość koszenia..... <b>B</b> Prędkość Obrótowa Urządzenia Tnącego..... <b>C</b> Gwarantowany Poziom Mocy Akustycznej..... <b>D</b> Mierzony Poziom Mocy Akustycznej..... <b>E</b> Poziom..... <b>F</b> Wartość..... <b>G</b> Odwaznik..... <b>H</b>	

### EC PROHLÁŠENÍ O SOULADU SE SMĚRNICI

Já, níže podepsaný M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b> , Co. Durham, DL5 6UP. Potvrzujeme, že tento výrobek:- Kategorie..... <b>Elektrické vřznáedlo</b> Značka..... <b>Electrolux Outdoor Products</b> splňuje specifikace Směrnice 2000/14/EEC	Já, níže podepsaný M. Bowden, Electrolux Outdoor Products, (Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b> , Co. Durham, DL5 6UP) prohlašuji, že exemplář svrchu uvedeného výrobku byl odtkoušen za použití směrnice 81/1051/EEC jako vodítka. Maximální A-vážená úroveň zvukového tlaku, která byla zaznamenaná pro pozici uživatele za podmínek volného pole polo-bezodzvukové komory, byla:-	Já, níže podepsaný M. Bowden, Electrolux Outdoor Products, (Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b> , Co. Durham, DL5 6UP) prohlašuji, že exemplář svrchu uvedeného výrobku byl odtkoušen za použití normy ISO 5349 jako vodítka. Maximální vážená odmocnina střední kvadratické hodnoty vibrace, která byla zaznamenaná v pozici ruky uživatele, byla:-
Typ řezného nástroje..... <b>Řezné lanko</b> Identifikace Série..... <b>Viz Štítek Technických Údajů Výrobku</b> Postup vyhodnocování souladu..... <b>ANNEX VI</b> Oznámeno orgánů..... <b>I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England</b> Jiné směrnice..... <b>98/37/EEC, 89/336/EEC, 73/23/EEC</b> a normy..... <b>EN786:1996, EN786A2:1996, IEC335-1:1991, IEC60335-2-91:1997, EN60555-2:1987, EN60555-3:1987, EN55014:1993, EN55014:1995</b>	Typ..... <b>A</b> Rotační rychlost řezného nástroje..... <b>B</b> Zaručená hladina akustického výkonu..... <b>C</b> Naměřená hladina akustického výkonu..... <b>D</b> Úroveň..... <b>E</b> Hodnota..... <b>F</b> Váha..... <b>G</b> Váha..... <b>H</b>	

### EC PREHLÁŠENIE O PRAVNEJ SPOSOBILOSTI TOVARU

Ja, dolupodpisany, M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, <b>NEWTON AYCLIFFE</b> , Co. Durham, DL5 6UP. Potvrdzujem, že výrobok:- Kategória..... <b>Elektrický oscilátor</b> Výroba..... <b>Electrolux Outdoor Products</b> Vyhovuje špecifikáciám uvedeným v Norme 2000/14/EEC	Ja, dopupodpisany, M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, v meste <b>NEWTON AYCLIFFE</b> , Co. Durham, DL5 6UP týmto potvrdzujem, že vzorka hore menovaného výrobku bola otestovaná v súlade s predpisom 81/1051/EEC. Pri maximálnom zaťažení úroveň tlaku zvuku nameraná u operátora za podmienok voľného polového pôsobenia polo-anechoického priestoru bola:-	Ja, dopupodpisany, M. Bowden, Electrolux Outdoor Products Park, Aycliffe Industrial Park, v meste <b>NEWTON AYCLIFFE</b> , Co. Durham, DL5 6UP, týmto potvrdzujem, že vzorka hore menovaného výrobku bola otestovaná v súlade s predpisom ISO 5349. Pri maximálnom zaťaženi základný priemer druhej mocihy vibrácie nameraný v operátorevej ruke bol:-
Typ rezného telesa..... <b>Umelohmotný nôž</b> Identifikácia série..... <b>Vid Štítek Parametrov Výrobku</b> Postupy určenia právnej spôsobilosti tovaru..... <b>ANNEX VI</b> Informované orgány..... <b>I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England</b> Ďalšie nariadenia..... <b>98/37/EEC, 89/336/EEC, 73/23/EEC</b> a normám..... <b>EN60555-2:1987, EN60555-3:1987, EN55014:1993, EN55014:1995, EN836:1997, IEC335-1:1991, IEC335-2-77:1996</b>	Typ..... <b>A</b> Šírka kosu..... <b>B</b> Rýchlosť rotácií rezného telesa..... <b>C</b> Garantovaný stupeň sily zvuku..... <b>D</b> Nameraný stupeň sily zvuku..... <b>E</b> Úroveň..... <b>F</b> Hodnota..... <b>G</b> Váha..... <b>H</b>	

A	<b>MLite 28</b>
B	<b>28 cm</b>
C	<b>7,250 RPM</b>
D	<b>96 dB (A)</b>
E	<b>96 dB (A)</b>
F	<b>84.1 dB(A)</b>
G	<b>1.21 m/s<sup>2</sup></b>
H	<b>4.5 kg</b>



Newton Aycliffe, 16/12/2002  
 M. Bowden,  
 Research & Development Director

<b>BELGIQUE/BELGIË</b>	<b>Flymo Belgique/België</b> Tel: 02 363 0311, Fax: 02 363 0391
<b>ČESKÁ REPUBLIKA</b>	<b>Electrolux, spol. s.r.o., oz Electrolux Outdoor Products,</b> Na Křečku 365, Praha 10 - Horní Měcholupy. Tel: 02/7847 0164, Info-linka: 0800/110 220 Internet: www.partner-flymo.cz E-mail: info@husqvarna.cz
<b>DANMARK</b>	<b>Electrolux Outdoor Products, Flymo/Partner A/S,</b> Lundtoftegaardsvej 93A, DK 2800 Kgs.Lyngby Tel: 45 87 75 77, Fax: 45 93 33 08, www.flymo-partner.dk
<b>DEUTSCHLAND</b>	<b>Flymo Deutschland</b> Tel: 097 21 7640, Fax:097 21 764202
<b>ESTONIA</b>	<b>Electrolux Estonia Ltd (Electrolux Eesti AS)</b> Tel: (372) 6650010
<b>FRANCE</b>	<b>Flymo France SNC</b> Tel 01 46 67 8141, Fax 01 43 34 2491
<b>FINLAND SUOMI</b>	<b>Electrolux Outdoor Products Finland</b> Tel: 00 358 9 39611, Fax: 00 358 9 3961 2644
<b>ITALIA</b>	<b>McCulloch Italiana s.r.l. - Via Como 72, 23868 Valmadrera (LECCO) - ITALIA</b> Tel: 800 017829, Fax: 0341 581671
<b>IRELAND</b>	<b>Flymo Ireland</b> Tel: 01 4565222, Fax: 01 4568551
<b>MAGYARORSZÁG</b>	<b>Electrolux Lehel Kft</b> Tel: 00 36 1 251 41 47
<b>NORGE</b>	<b>Flymo/Partner, div. av Electrolux Motor a.s.</b> Tel: 69 10 47 90
<b>NEDERLAND</b>	<b>Flymo Nederland</b> Tel: 0172-468322, Fax: 0172-468219
<b>ÖSTERREICH</b>	<b>Husqvarna-Ges.m.b.H. Nfg. KG, Industriezeile 36, 4010 LINZ,</b> Tel: 0732 770101-0, Fax: 0732 770101-40, email: office@husqvarna.co.at Internet: www.husqvarna.at
<b>POLSKA</b>	<b>Electrolux Poland Sp. z.o.o. Husqvarna, Wysockiego 15 b 03-371 Warszawa</b> Tel:- (0-22) 330 96 00, Fax: (0-22) 330 96 35
<b>SLOVENIJA</b>	<b>Husqvarna-Ges.m.b.H. Nfg. KG, Industriezeile 36, 4010 LINZ,</b> Tel: 0732 770101-0, Fax: 0732 770101-40, email: office@husqvarna.co.at Internet: www.husqvarna.at
<b>SLOVENSKA</b>	<b>Electrolux Slovakia s.r.o., Borova Sihot 211, 033 01 Lipt. Hradok</b> Tel: 044 522 14 19, Fax: 044 522 14 18, www.flymo-partner.sk
<b>SCHWEIZ/SUISSE/SUIZZERA</b>	<b>Flymo Schweiz/Suisse/Suizzera</b> Tel 062 889 93 50 / 889 94 25, Fax 062 889 93 60 / 889 94 35
<b>SVERIGE</b>	<b>Electrolux Outdoor Products, Sverige</b> Tel: 036 – 14 67 00, Fax: 036 – 14 60 70
<b>UNITED KINGDOM</b>	<b>Electrolux Outdoor Products United Kingdom</b> Tel: 01325 300303, Fax: 01325 310339

Electrolux Outdoor Products  
Aycliffe Industrial Park  
NEWTON AYCLIFFE  
Co.Durham DL5 6UP  
**ENGLAND**

**Telephone - (00) 44 1325 300303 Fax - (00) 44 1325 310339**

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice. Electrolux Outdoor Products manufacture products for a number of well known brands under various registered patents, designs and trademarks in several countries.

© Electrolux Outdoor Products Ltd. Registered Office, Electrolux Works, Oakley Road, Luton LU4 9QQ  
Registered number 974979 England



**The Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

